

Mobile Release 5.14.3



MTP830 S

FEATURE USER GUIDE

H.E.R.T.Z Elektronik GmbH

Strausberger Straße 8h (Pappelhain)
15378 Rüdersdorf bei Berlin (OT Herzfelde)

Telefon: 033434 766-0

Fax: 033434 766-76

E-Mail: info@hertz-elektronik.de

Internet: www.hertz-elektronik.de



October 2012

EN

© 2012 Motorola Solutions, Inc. All rights reserved.



68015000597-D

Contents

1	General Information	1-1
1.1	Safety Information	1-1
1.2	Copyrights.....	1-1
1.3	Icon Conventions.....	1-2
1.4	Using this Guide.....	1-3
2	Getting Started	2-1
2.1	Product Technical Information	2-1
2.2	Before Power On	2-1
2.2.1	Attaching the Antenna	2-1
2.2.2	Installing the Battery	2-2
2.2.3	Removing the Battery.....	2-3
2.2.4	Charging Your Radio.....	2-3
2.2.5	Charging Indicators.....	2-4
2.2.6	Low Battery Indication	2-4
2.3	Controls and Indicators	2-5
2.4	Display	2-8
2.5	Status Icons	2-9
2.6	Powering On the Radio	2-12
2.7	Unlocking Your Radio	2-13
2.7.1	Unblocking Your Radio	2-13
2.8	Locking/Unlocking the Keys/Buttons	2-14
2.9	Holding Your Radio	2-14
2.10	Setting Vertical Flip.....	2-15
2.11	Entering TMO / DMO Mode	2-15
2.12	Transmit Inhibit Mode	2-15
2.13	Selecting a Talkgroup	2-16
2.14	Using Timed Talkgroup Change.....	2-16
2.15	Activating Talkgroup Scanning.....	2-17
2.16	Dialing through Soft Numeric Keypad	2-18
2.17	Broadcast Call	2-18
2.18	Ambience Listening (AL) Call.....	2-18
2.19	One-Touch Button Feature	2-19
2.20	Terminal Temporary Disable/Enable	2-20
2.21	Terminal Permanent Disable.....	2-20
2.22	High/Low Audio Toggle.....	2-20
2.22.1	Using High Audio	2-20
2.22.2	Using Low Audio	2-21
2.23	During the Call	2-21
2.24	Writing Text.....	2-21
2.24.1	Text Entry Icons	2-22
2.24.2	Keys Usage	2-22
2.25	Home Display Text Message	2-23
3	Modes	3-1
3.1	Using Networks.....	3-1
3.2	Trunked Mode Operation	3-1
3.2.1	Entering TMO Mode	3-2
3.2.2	Selecting a Talkgroup	3-2
3.2.3	Making a Group Call in TMO	3-3
3.2.4	Receiving a Group Call in Idle	3-3
3.2.5	Receiving a Group Call during an Ongoing Group Call	3-3
3.2.6	Dynamic Group Number Assignment (DGNA)	3-4
3.2.7	DGNA Reception	3-4

3.2.8	DGNA Auto Select Group.....	3-4
3.2.9	Viewing DGNA Talkgroups.....	3-4
3.2.10	Broadcast Call Initiated by User.....	3-4
3.2.11	Initializing Broadcast Call	3-5
3.2.12	Phone and PABX Calls	3-5
3.2.13	Private Call.....	3-5
3.2.14	Making a Private Call	3-5
3.2.15	Assistance Call.....	3-6
3.2.16	Call Modification.....	3-6
3.3	Local Site Trunking.....	3-7
3.3.1	Entering Local Site Trunking	3-7
3.3.2	Exiting Local Site Trunking.....	3-8
3.4	Direct Mode Operation	3-8
3.4.1	Entering DMO Mode	3-8
3.4.2	Selecting a Talkgroup	3-9
3.4.3	Making a Group Call in DMO	3-9
3.4.4	Receiving a Group Call in Idle	3-10
3.4.5	Private Call	3-10
3.4.6	Making a Private Call.....	3-10
3.4.7	Private Call With Presence Check	3-11
3.4.8	Talkgroup for Individual Calls.....	3-11
3.4.9	Communication through Repeater.....	3-11
3.4.10	Communication through Gateway	3-12
3.4.11	Selecting DMO Group Call Options	3-13
3.5	Transmit Inhibit Mode	3-13
3.6	Emergency Mode.....	3-14
3.6.1	Emergency Group Call	3-15
3.6.2	Emergency Private Call	3-15
3.6.3	Emergency MS-ISDN Call	3-15
3.6.4	Emergency Alarm.....	3-16
3.6.5	Hot Microphone	3-16
3.6.6	Alternating Hot Microphone	3-16
3.6.7	Entering Emergency Mode	3-17
3.6.8	Exiting Emergency Mode.....	3-17
3.6.9	Making an Emergency Group Call	3-17
3.6.10	Receiving an Emergency Group Call	3-18
3.6.11	Disaster Alert Call.....	3-18
3.6.12	Initializing Disaster Alert Call	3-19
3.6.13	Silent Emergency Mode	3-19
3.7	Repeater Mode.....	3-20
3.7.1	Entering Repeater Mode	3-20
3.7.2	Setting Monitor Option.....	3-21
3.7.3	Encryption in Repeater Mode.....	3-21
4	GPS Location Service.....	4-1
4.1	Enhancing GPS Performance	4-2
4.2	Enabling GPS	4-3
4.3	GPS Icon	4-3
4.4	GPS Different Location Displays	4-3
4.5	Viewing Your Position	4-5
4.6	Changing GPS Accuracy.....	4-5
4.7	GPS — Things to Keep in Mind	4-5
5	Main Menu.....	5-1
5.1	Scrolling through the Menu	5-1
5.2	Menu Icons.....	5-1
5.3	Menu Structure.....	5-2

5.4	Messages	5-7
5.4.1	New Message	5-7
5.4.1.1	Sending a Message to Private/Phone	5-8
5.4.1.2	Sending a Message to Group	5-8
5.4.1.3	Sending a Store and Forward Message	5-8
5.4.1.4	Delivery Report	5-9
5.4.1.5	Configuring Delivery Report	5-10
5.4.2	Inbox	5-10
5.4.2.1	Entering the Inbox	5-10
5.4.2.2	Receiving New Message	5-11
5.4.2.3	Using Submenu in Inbox and Outbox	5-11
5.4.2.4	Embedded Number	5-11
5.4.2.5	Storing a Number from a Message	5-12
5.4.2.6	Calling a Number in a Message	5-12
5.4.2.7	Making a Group Call on a Talkgroup of the Message Originator	5-13
5.4.2.8	Immediate Message	5-13
5.4.3	Outbox	5-14
5.4.4	CO Box	5-14
5.4.5	WAP Box	5-14
5.4.6	Templates	5-14
5.4.6.1	Sending a User-Defined Template	5-15
5.4.6.2	Setting User-Defined Templates	5-15
5.4.7	Predefined Templates	5-15
5.4.7.1	Viewing Predefined Templates	5-15
5.4.7.2	Sending Predefined Templates	5-16
5.4.8	Send Status	5-16
5.4.8.1	Viewing a Status Message Number	5-16
5.4.8.2	Sending a Status Message to a Group	5-16
5.4.8.3	Targeted Status	5-17
5.4.8.4	Sending a Targeted Status Message	5-18
5.5	Contacts	5-18
5.5.1	Creating a Contact	5-19
5.5.2	Editing a Contact	5-20
5.5.3	Deleting a Number	5-20
5.5.4	Deleting a Contact	5-21
5.5.5	Checking Capacity	5-21
5.5.6	Dialing through the Contact List	5-22
5.6	Security	5-22
5.6.1	PIN Protect	5-22
5.6.1.1	Protecting the Radio with a PIN Code	5-23
5.6.1.2	Unblocking Your Radio	5-23
5.6.1.3	Changing PIN Code	5-24
5.6.2	Keylock Setup	5-24
5.6.2.1	Keypad Lock Notification	5-25
5.6.2.2	Setting Automatic Keylock Delay	5-25
5.6.2.3	Setting Keylock on Startup	5-25
5.6.3	Air Encryption	5-25
5.6.3.1	Viewing Air Encryption State	5-26
5.6.3.2	Air Encryption Key Deletion	5-26
5.6.4	K Validity	5-26
5.6.4.1	Verifying K Validity	5-27
5.6.5	TMSCK Validity	5-27
5.6.5.1	Verifying TMSCK Validity	5-27
5.6.6	DMSCK Validity	5-27
5.6.6.1	Verifying DMSCK Validity	5-28

5.6.7	DMO SCK	5-28
5.6.7.1	Changing DMO SCK	5-29
5.6.8	Covert Mode	5-29
5.6.8.1	Activating Covert Mode	5-30
5.6.8.2	Setting to Vibrate in Covert Mode	5-30
5.7	Man Down	5-30
5.7.1	Setting Man Down	5-31
5.8	Setup	5-31
5.8.1	Vibrate	5-31
5.8.1.1	Setting Default Vibrate	5-32
5.8.1.2	Setting Detail Vibrate	5-32
5.8.2	Ring Style	5-32
5.8.2.1	Setting Ring Style	5-33
5.8.3	Set Volume	5-33
5.8.3.1	Setting Volume	5-34
5.8.4	Language	5-34
5.8.4.1	Setting Language	5-35
5.8.5	Data Setup	5-35
5.8.5.1	Setting Data Function	5-35
5.8.6	Audio	5-35
5.8.6.1	Audio Profile	5-36
5.8.6.2	Setting Audio Profile	5-36
5.8.6.3	Howling Suppression	5-36
5.8.6.4	Setting Howling Suppression	5-37
5.8.6.5	Audio Toggle	5-37
5.8.6.6	Setting Audio Toggle	5-37
5.8.6.7	Volume Adjustment Mode	5-37
5.8.6.8	Setting Volume Adjustment Mode	5-38
5.8.7	Tones	5-38
5.8.7.1	Keypad Tone	5-38
5.8.7.2	Setting Keypad Tone	5-39
5.8.7.3	All Tones	5-39
5.8.7.4	Setting All Tones	5-39
5.8.7.5	Talk Permit	5-39
5.8.7.6	Setting Talk Permit	5-40
5.8.7.7	Clear to Send	5-40
5.8.7.8	Setting Clear to Send	5-40
5.8.7.9	Periodic Alert	5-40
5.8.7.10	Setting Periodic Alert	5-41
5.8.7.11	D-PTT Tones	5-41
5.8.7.12	Setting D-PTT Tones	5-41
5.8.8	Display	5-41
5.8.8.1	Setting Vertical Flip	5-42
5.8.8.2	Setting Text Size	5-42
5.8.8.3	Setting Screen Saver	5-43
5.8.8.4	Setting Backlight	5-43
5.8.8.5	Setting Wallpaper	5-44
5.8.8.6	Setting Contrast	5-44
5.8.9	Time and Date	5-45
5.8.9.1	Setting Time and Date on the Display	5-46
5.8.9.2	Setting Time Format	5-46
5.8.9.3	Setting Time Manually	5-46
5.8.9.4	Setting Date Format	5-47
5.8.9.5	Setting Date Manually	5-47
5.8.9.6	Setting Time Offset	5-48

5.8.9.7	Setting Automatic Update for the Time and Date	5-48
5.8.10	Energy Economy	5-48
5.8.10.1	Enabling Energy Economy	5-49
5.8.10.2	Viewing Energy Economy Status	5-49
5.8.11	Transmission Power Class	5-49
5.8.11.1	Selecting RF Power	5-49
5.8.12	Accry (Accessory) Setup	5-50
5.8.12.1	Selecting Accessory	5-50
5.8.13	Book On	5-50
5.8.13.1	Editing Book On Settings	5-51
5.8.14	Rotary Knob	5-51
5.8.14.1	Setting Rotary Knob Mode	5-52
5.8.14.2	Setting Rotary Lock	5-52
5.8.14.3	Setting In Keypad Lock	5-52
5.8.14.4	Setting Rotary Knob Wrap Around	5-53
5.8.14.5	Setting Rotary Knob Scroll Range	5-53
5.8.14.6	Setting Rotary Knob Talkgroup Selection	5-54
5.8.14.7	Setting Rotary Knob Function Keys	5-54
5.9	Group Setup	5-54
5.9.1	Scan	5-55
5.9.1.1	Activating Talkgroup Scanning	5-55
5.9.1.2	Setting Talkgroups in the Active Scan List	5-55
5.9.1.3	Setting Scan Lists	5-56
5.9.1.4	Editing Scan Lists	5-57
5.9.2	My Groups	5-57
5.9.2.1	Adding Favorite Folder	5-57
5.9.2.2	Adding a Talkgroup to a Favorite Folder	5-58
5.9.2.3	Editing My Folder List	5-58
5.9.2.4	Deleting a Talkgroup from the Favorite Folder	5-59
5.10	My Info	5-59
5.10.1	Viewing/Modifying Personal Information	5-60
5.11	Recent Calls	5-60
5.11.1	Viewing Recent Calls	5-60
5.11.2	Calling from Recent Calls	5-61
5.11.3	Storing Recent Calls to Contacts	5-61
5.11.4	Deleting Recent Calls	5-62
5.12	RUI	5-62
5.12.1	Logging On	5-63
5.12.2	Logging Off	5-63
5.13	Networks	5-63
5.13.1	Selecting Your Network	5-64
5.13.2	Using the Select Net Registration	5-64
5.13.3	Using the Foreign Network Registration	5-64
5.13.4	Using Any Network	5-65
5.13.5	Using the Migrate To Registration	5-65
5.13.6	Selecting Network Operation Mode	5-66
5.14	Location	5-66
5.14.1	Viewing Your Position	5-67
5.14.2	Changing GPS Accuracy	5-67
5.15	Packet Data	5-67
5.15.1	Viewing Data Statistics	5-68
5.15.2	Viewing Encryption Status	5-68
6	Features	6-1
6.1	Private Call	6-1
6.1.1	Making a Private Call	6-1

6.2	Dialing through Soft Numeric Keypad	6-1
6.3	Phone and PABX Calls	6-2
6.3.1	Making a Phone or PABX Call	6-2
6.4	Phone/PABX Speed Dial	6-2
6.4.1	Using Phone/PABX Speed Dial	6-3
6.5	MS-ISDN	6-3
6.6	DTMF Overdial	6-3
6.7	Short Number Dial	6-3
6.8	WAP	6-3
6.8.1	WAP Browser	6-4
6.8.2	Entering/Exiting the Browser	6-4
6.8.3	Entering the Browser Menu Panes	6-4
6.8.4	Tips for Browsing	6-4
6.8.4.1	Creating a Bookmark through Navigate Pane	6-5
6.8.4.2	Creating a Bookmark through Bookmarks Pane	6-5
6.8.4.3	Using a Bookmark	6-5
6.8.4.4	Saving a Page	6-6
6.8.4.5	Selecting a Saved Page	6-6
6.8.5	Disabled Packet Data Service	6-6
6.8.6	Disabled Browser Entry	6-7
6.8.7	Keys Usage	6-7
6.8.8	Browser Menu Panes Overview	6-8
6.8.9	Navigate Pane	6-8
6.8.10	Advanced... ..	6-9
6.8.11	Bookmarks Pane	6-9
6.8.11.1	Working with the Options Pane for a Selected Bookmark	6-10
6.8.11.2	Working with the Saved Pages Folder	6-10
6.8.12	History Pane	6-11
6.8.12.1	Navigating to the Recently Visited URL	6-11
6.8.13	Tools Pane	6-11
6.8.14	Options Pane	6-11
6.8.15	Image Pane	6-11
6.8.16	Text Input Pane	6-12
6.8.17	WAP Push	6-12
6.8.17.1	New WAP Messages	6-13
6.8.17.2	Viewing a WAP Message	6-14
6.9	Call-Out	6-14
6.9.1	Types of Call-Out Alerts	6-14
6.9.2	Call-Out Modes Interaction	6-15
6.9.3	Call-Out Service Phases	6-15
6.10	Voice Operating Transmission (VOX) Control	6-15
Appendix A	Tones	A-1
Appendix B	LED Indications	B-1
Appendix C	Troubleshooting	C-1
Appendix D	Maintenance	D-1
D.1	Storage	D-1
D.2	Extending Battery Life	D-1
D.3	Battery Charging Temperature	D-1
D.4	Battery Charging Rules	D-1
D.5	Additional Battery Warnings/Cautions	D-2

List of Figures

Figure 3-1	Trunked Mode Operation	3-2
Figure 3-2	Direct Mode Operation.....	3-8
Figure 3-3	Repeater Mode Operation	3-20

List of Tables

Table 1-1	Special Notations	1-3
Table 2-1	Product Technical Information	2-1
Table 2-2	Battery Icons	2-4
Table 2-3	Controls and Indicators.....	2-6
Table 2-4	Display	2-8
Table 2-5	Colors of the SOFT Keys.....	2-8
Table 2-6	Status Icons.....	2-9
Table 2-7	One-Touch Button Features.....	2-19
Table 2-8	During the Call	2-21
Table 2-9	Text Entry Screen Icons.....	2-22
Table 2-10	Keys Usage.....	2-22
Table 4-1	Different Location Displays	4-3
Table 5-1	Menu Icons	5-1
Table 5-2	Menu Structure	5-2
Table 5-3	Inbox Icons	5-10
Table 5-4	Outbox Icons.....	5-14
Table 5-5	Contact Types.....	5-18
Table 6-1	Browser Keys Usage.....	6-7
Table 6-2	Browser Menu Panes	6-8
Table 6-3	Additional Menu Panes	6-8
Table 6-4	Browser Text Input Icons	6-12
Table A-1	Radio Tones	A-1
Table B-1	LED Indications.....	B-1
Table C-1	Displayed Messages.....	C-1

1 General Information

1.1 Safety Information



CAUTION

Before using these products, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet 6804113J24 for APAC & LACR and 6864117B25 for EMEA.

Your radio is restricted to occupational use only to satisfy ICNIRP RF energy exposure requirements. Before using the products, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet to ensure compliance with RF energy exposure limits.

Keep this User Guide and the Product Safety and RF Exposure booklet in a safe place and make it available to other operators in case the accessories are passed on to other people.

1.2 Copyrights

The Motorola products described in this document may include copyrighted Motorola computer programs. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola.

© 2012 Motorola Solutions, Inc. All Rights Reserved.

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal nonexclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Disclaimer

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a particular system, or may be dependent upon the characteristics of a particular mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola contact for further information.

Trademarks

MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive



The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trashbin label on the product (or the package in some cases).

As defined by the WEEE directive, this cross-out trashbin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.

1.3 Icon Conventions

The document's "set" is designed to give the reader more visual clues. The following graphic icons are used throughout the documentation set. These icons and their associated meanings are described below.



DANGER

The signal word **DANGER** with the associated safety icon implies information that, if disregarded, will result in death or serious injury.



WARNING

The signal word **WARNING** with the associated safety icon implies information that, if disregarded, could result in death or serious injury, or serious product damage.



CAUTION

The signal word **CAUTION** with the associated safety icon implies information that, if disregarded, may result in minor or moderate injury, or serious product damage.

CAUTION

The signal word **CAUTION** may be used without the safety icon to state potential damage or injury that is not related to the product.



IMPORTANT

IMPORTANT statements contain information that is crucial to the discussion at hand, but is not **CAUTION** or **WARNING**. There is no warning level associated with the **IMPORTANT** statement.

**NOTE**

NOTE contains information more important than the surrounding text, such as exceptions or preconditions. They also refer the reader elsewhere for additional information, remind the reader how to complete an action (when it is not part of the current procedure, for instance), or tell the reader where something is located on the screen. There is no warning level associated with a note.

**SUGGESTION**

SUGGESTION implies a recommendation or tip from Motorola that does not require to be followed, but might be helpful. There is no warning level associated with SUGGESTION.

1.4 Using this Guide

This guide describes all available radio features. Your service provider may have customized your radio to optimize its use for your individual needs. Check with you service provider to find out the differences from this guide. Throughout the text in this publication, you notice the following special notations used to highlight certain information or items:

Table 1-1 Special Notations

Example	Description
EMERGENCY button	Capital letters indicate the name of a key or button.
<i>Entering TMO tone</i>	Italic letters indicate the name of the tone.
Powering Off	Bolded words indicate the soft menu items, MMI strings, or messages displayed on the radio.
Setup → Tones → All Tones	Bolded words with the arrow between indicate navigation structure in the menu items.

2 Getting Started

This chapter contains basic information on how to use the radio.

2.1 Product Technical Information

Table 2-1 Product Technical Information

Description	Value		
Maximum Voltage	4.2 V		
Maximum Current	0.5 A		
Maximum RF Power	1 or 1.8 Watt (Adjustable)		
Maximum Speaker Load	0.5 Watts at 8 Ohms		
Antenna Impedance	50 Ohms		
Operating Temperature Range	-25° C to +60° C		
Operating Time	Duty Cycle	Class 4 (1 W)	Class 3L (1.8 W, 380–430 MHz only)
	05/05/90	> 23 h	> 20.5 h
	05/35/60	> 17 h	> 15.5 h
	Talk Time	3.5 h	2.5 h



NOTE

The communication system determines the radio transmit and receive time (operating cycle time). During overload, or beyond the systems specifications at high ambient temperatures, the thermal control cuts down the RF power output, which reduces the radio coverage range.

2.2 Before Power On


Read this section before you power on your radio for the first time.

2.2.1 Attaching the Antenna

Procedure Steps

- 1 Insert the screw-in base of the antenna into the antenna terminal on the top of the radio.


- 2 Turn clockwise until snug.

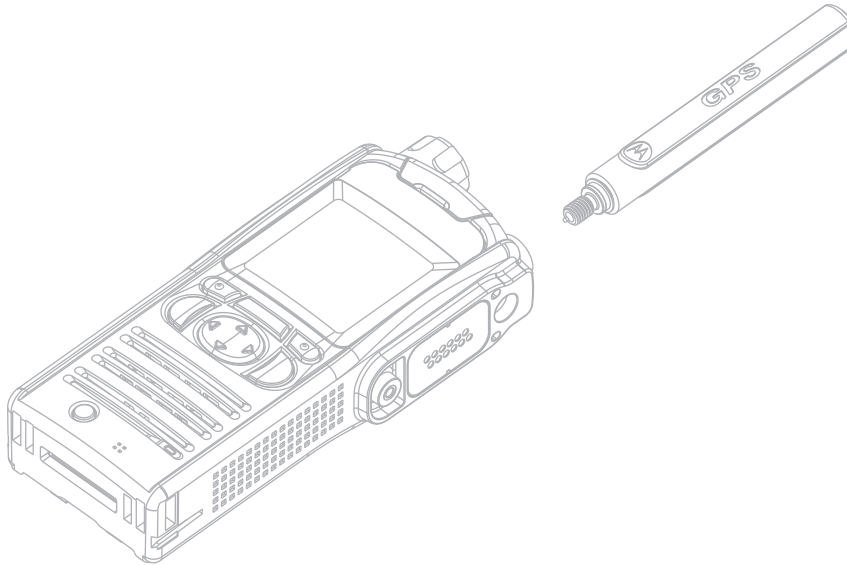

2.2.2 Installing the Battery

Procedure Steps

- 1 Remove the battery from its protective clear plastic case.
 - 2 Insert the battery top into the compartment as illustrated.
-

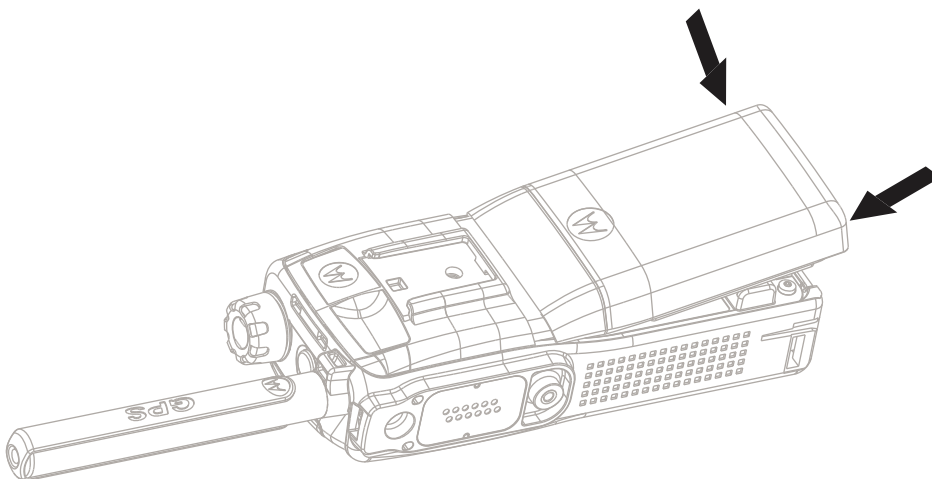

- 3 Carefully press the battery bottom downward until it clicks into place

**NOTE**

- Your service provider can configure the radio to turn on automatically after you insert the battery.
 - Your radio always powers up, if you remove the battery for a period shorter than 3-5 seconds.
-

2.2.3 Removing the Battery

Procedure Steps

- 1 Push the latch.
 - 2 Lift the battery out.
-

2.2.4 Charging Your Radio

Prerequisites:

Do not charge the battery in a hazardous area.

Turn off the radio. When the radio is turned off, the battery charges faster.

Make sure you have an appropriate plug adapter.

Procedure Steps

- 1 Connect the charger to the charging socket at the base of the radio.
 - 2 If needed, connect the appropriate plug adapter to the charger.
 - 3 Plug the charger into a power outlet.
-

**NOTE**

- Motorola approved chargers provide optimum performance. Other chargers may not fully charge your Motorola Lithium-Ion battery or may reduce the life of the battery.
 - The battery can heat up during charging. After charging, make sure that the battery and the radio are in the operating temperature range.
-

2.2.5 Charging Indicators

When your radio is turned on while charging, it displays an icon of the battery in charging.

When your radio is turned off while charging, it displays the icon of the battery in charging and backlights the display.

Table 2-2 Battery Icons

Battery Capacity				Battery Charge Progress			
							
Empty 5%-10%	Low 10%-20%	Middle 20%-90%	Full 90%-100%	Empty 5%-10%	Low 10%-20%	Middle 20%-90%	Full 90%-100%

2.2.6 Low Battery Indication

The radio indicates low battery level by playing an audible alert when the battery charge falls to a preset level. The low battery alert can be programmed by your service provider to 5, 10, or 20 per cent of remaining capacity. The default setting is 5 per cent. The alert is repeated every 30 seconds.

2.3 Controls and Indicators

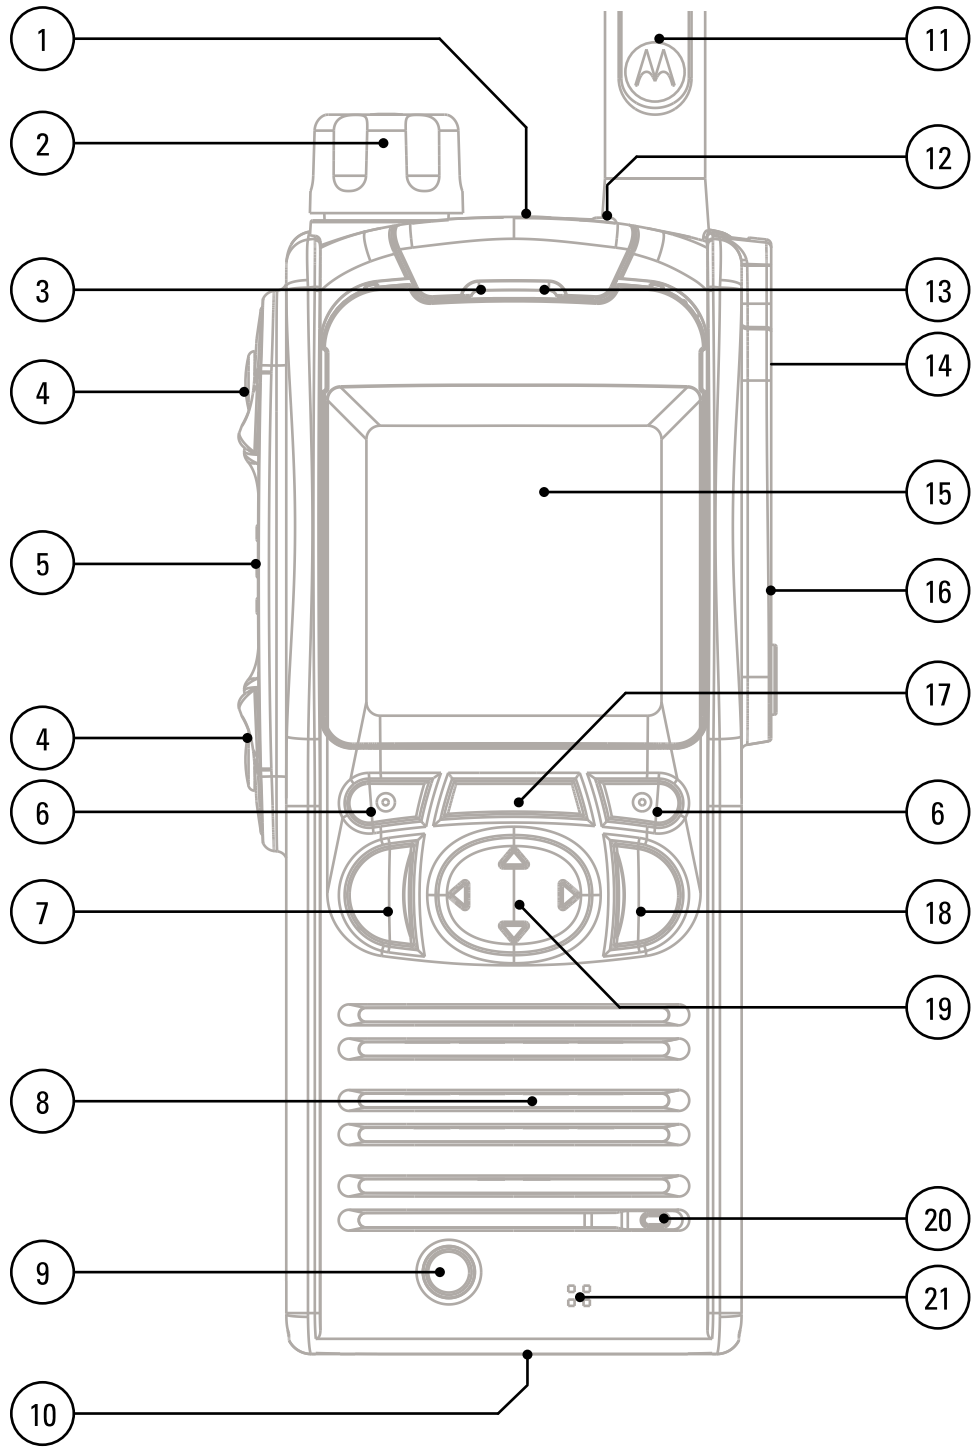


Table 2-3 Controls and Indicators

Annotation	Description
1	EMERGENCY button Press and hold EMERGENCY button to enter Emergency operation. When your radio is off, press and hold to power on in Emergency Mode.
2	ROTARY KNOB • Rotate to set the volume. • Press and rotate to select a different talkgroup. • Press and hold the ROTARY KNOB to lock/unlock it. Powering off also unlocks a locked ROTARY KNOB.
3	EARPIECE
4	SIDE button The ROTARY KNOB and SIDE buttons programming are paired. When the ROTARY KNOB is set to Volume or Dual, the SIDE buttons support the One-Touch Button feature. By default, the upper SIDE button is set to Backlight feature and the lower SIDE button is set to Screen Saver feature.  NOTE The required time to press and hold SIDE button to activate an One-Touch Button feature is set as default to 0,1 second.
5	PTT (Push-To-Talk) • Press and hold to talk in simplex calls or to initiate a group call, release it to listen. • Press to send status and text messages.
6	SOFT key Press left or right SOFT key, to select the option that appears on the screen directly above the them.
7	SEND key Press to initiate or answer duplex calls, or send messages.
8	SPEAKER
9	SPEAKER CONTROL key Press the SPEAKER CONTROL key to activate the earpiece Speaker LOW or speaker Speaker HIGH.  NOTE In an Emergency Group Call, the speaker is activated regardless of the speaker setting.

Table 2-3 Controls and Indicators (cont'd.)

Annotation	Description
10	ACCESSORY CONNECTOR Provides connection for accessories and cable for data transfer.
11	ANTENNA
12	LED
13	TOP MICROPHONE Activated during Simplex, high audio calls such as Group Calls.
14	EXTERNAL ANTENNA CONNECTOR Used with the digital car kit to connect the RF signal to the external antenna.
15	DISPLAY Provides alphanumeric text and images within 65,536 colors and 130 x 130 pixels with backlight, scalable fonts, and contrast.
16	SIDE CONNECTOR Used to connect accessories and for programming.
17	MENU key • From the home screen, press to enter the main menu. • Used to enter the context-sensitive menu.
18	ON/OFF/END/HOME key • Press and hold to turn on/off your radio. • Press to end calls. • Press to return to the home screen.
19	NAVIGATION key Press up, down, left or right NAVIGATION key for list scrolling, while moving around the menu hierarchy, or for alphanumeric text editing. From the home screen, press to activate one of the following: • down NAVIGATION key — enters Recent Calls menu item. • up NAVIGATION key — changes My Groups talkgroup folder. • left and right NAVIGATION key — toggles through the talkgroups.
20	BACKLIGHT SENSOR Your radio keypad can be illuminated whenever the backlight is on. The keypad backlight sensor determines whether there is a need to light up the keypad backlight, by measuring the ambient light intensity. This feature can improve power saving. When the radio is in the battery charger, the keypad backlight remains illuminated and the BACKLIGHT SENSOR is ignored.
21	BOTTOM MICROPHONE

**NOTE**

A detailed list of compatible accessories is included in *Accessory Leaflet*, part number: 68015000601. To obtain the document, contact your service provider.

2.4 Display

This section presents the radio's home screen elements.



Table 2-4 Display

Annotation	Description
1	Status icon area
2	Text display area
3	SOFT key area
4	MENU/Context sensitive icon

The color of the SOFT keys informs you about the mode or state that your radio is in.

Table 2-5 Colors of the SOFT Keys

Color	Mode or State
Light blue	Normal TMO and DMO Mode
Light red	Emergency Mode or Disaster Alert Call
Yellow	Call Out — Standby
Red	Call Out — Alert
Green	Call Out — Accepted
Blue	Radio Message Service (RMS)
Grey	Radio User Assignment (RUA) — Limited service

SEE ALSO

[Display](#)

[Setting Time and Date on the Display](#)

2.5 Status Icons

Status icons appear when your radio is engaged in certain activities or when you have activated certain features.

Table 2-6 Status Icons

Icon	Description
Trunked Mode Operation	
	In Service (Signal Strength) — Allows you to check signal strength. More bars indicate a stronger signal.
	No Service
	Migration — Displayed when your radio is registered to the foreign network.
	Broadcast Call — Displayed when the radio is in the Broadcast Call.
	Scan — Indicates talkgroup scanning is activated in the radio.
	Priority Scan — Indicates that priority scanning is activated in the radio.
	Data Connected — Displayed when the Packet Data feature is activated and the external device sets up data connection with the radio.
	Data Transmit/Receive — Displayed when the Packet Data feature is activated and the external device sets up data connection with the radio. • No number — standby data session. • Number 1, 2, 3, or 4 — indicates active data session with 25%, 50%, 75%, or 100% bandwidth.
Direct Mode Operation	
	Direct Mode Call — Displayed during a Direct Mode call; more bars indicate a stronger signal.
	Direct Mode — Displayed when the radio is in Direct Mode.
	Repeater Mode — Displayed when the radio is switched to work as a repeater in Repeater Mode.
	DMO Gateway Communication Mode — Indicates that gateway is selected. The icon has the following states: • Solid — while the radio is synchronized with the gateway. • Blinking — while the radio is not synchronized or during attachment. • No icon — during a radio to radio and repeater call.

Table 2-6 Status Icons (cont'd.)

Icon	Description
	DMO Repeater Communication Mode — Displayed when the Repeater or GW + Rep option in DMO Mode is selected. This icon has the following states: • Solid — while the radio has detected the repeater (for example when the radio receives a presence signal). • Blinking — while the radio has not detected the repeater or during attachment. • No icon — during a radio to radio and gateway call.
General Icons	
	All Tones Off/Duplex and Simplex Ring Muted — Indicates that all alert tones are off in the radio or both simplex ring volume is set to 0 and duplex ring volume is set to 0.
	Simplex Ring Muted — Indicates that simplex ring volume is set to 0 and duplex ring volume is set to more than 0.
	Duplex Ring Muted — Indicates that duplex ring volume is set to 0 and simplex ring volume is set to more than 0.
	Vibrate On — Indicates that the radio vibrates to alert you of an incoming call.
	Vibrate then Ring — Indicates that the radio vibrates and rings to alert you of an incoming call.
	Low Audio — Indicates that the audio mode is changed to low.
	High Audio — Indicates that the audio mode is changed to high.
	Earpiece Connected — Indicates that the earpiece is connected.
	GPS — Indicates that a valid location coordinates are received.
	RUI Logged on — Indicates that you are logged on into the radio.
	RUI Pseudo Log On — Indicates that you are in pseudo logged on state.
	RUI Packet Data — Indicates Pseudo Log On state when the Packet Data feature is activated and the external device sets up data connection with the radio. • No number — standby data session. • Number 1, 2, 3, or 4 — indicates active data session with 25%, 50%, 75%, or 100% bandwidth.
	RUI Packet Data — Indicates Pseudo Log On state when the Packet Data feature is activated and the external device sets up data connection with the radio.
	Battery Strength — Shows the charge of your battery.

Table 2-6 Status Icons (cont'd.)

Icon	Description
	Battery Charging — Indicates that the battery is charging.
	NOTE See the section “Charging Battery”.
	RF Power — Indicates the High RF Power is enabled. Shows the signal strength. More bars indicate a stronger signal.
	Emergency — Appears while the radio is in Emergency Operation.
	Disaster Alert Call — Appears while the radio is in the Disaster Alert Call.
	List Scrolling — Displayed to indicate that the ROTARY KNOB is in list scrolling mode.
	New Message Has Arrived — Indicates a new message just arrived.
	New Message(s) in Inbox — Indicates that you have unread messages in your Inbox .
	Unread (New) WAP Message — Indicates that new page was loaded to the browser.
	Man Down Active — Indicates that the Man Down feature is active.
	Man Down Alert — Displayed when the Man Down feature is active. This icon has two states: - Blinking — pre-Alert; the radio signalizes Man Down conditions. To exit the pre-Alert state, change the conditions or press the PTT. - Solid — the radio entered the Alert mode.
	Man Down Failure — Indicates the Man Down device failed.
	Call-Out — Indicates Call-Out alert.
	Call-Out Alert Arrived — Indicates a receipt of a new Call-Out message.
	Call-Out Alert Unread — Indicates unread alert in the CO Box .
	End-to-End Encryption (E2EE) Solid, when the E2EE is enabled - for the selected talkgroup, - for the highlighted private number, - for the manually entered private number, - when transmitting voice in Group Calls, - when transmitting voice in Simplex Private Calls. Blinking, when the End-to-End Encryption is enabled - when receiving voice in Group Calls,

Table 2-6 Status Icons (cont'd.)

Icon	Description
	• when receiving voice in Simplex Private Calls, • during encrypted Duplex Private Calls.
	SDS End-to-End Encryption Solid, when the E2E status of an SDS message, or the E2E status of a message recipient address. In High Security mode, when your radio processes only the encrypted information, this icon is always visible in when you are in the messages menu (for example, Inbox).
	Unread (New) WAP Message — Indicates that you have not entered WAP Box since last WAP message was received (Blinks when the priority is high).
	WAP Message Icon — Displayed next to the priority in the message list view.
	WAP Message Time — Displayed next to the create date in the message list view.
	WAP Message Expiration — Displayed next to the expiry date in the message list view.
	WAP Message Title Icon — Displayed next to the title along with the text in the message list view.
	Keys Locked — Indicates that keys are locked.
	Non Secured Call — Air Encryption Unavailable Blinking, indicates that Air Encryption is not available when the radio: • Is in the Local Site Trunking Mode. • Attempts to connect to a gateway.
	Not Secured Call — Air Encryption Unavailable Alternately blinking, indicates that Air Encryption is not available when the radio: • Is in TMO Mode. • Communicates through a gateway.
	Not Secured Call — Air Encryption Unavailable Blinking, indicates that Air Encryption is not available in DMO Mode. The icon appears after the PTT button is pressed.

SEE ALSO

[Air Encryption](#)

2.6 Powering On the Radio

Procedure Steps

- 1 Press and hold ON button.

2 Your radio performs a self-check and registration routine.

3 After successful registration, your radio is in service.

**NOTE**

Your radio powers on without visible and audible notification if Covert Mode is activated.

2.7 Unlocking Your Radio

Your radio may be locked at power up. To unlock it after powering on, enter the code at the prompt. Your radio enters the default home display.

**NOTE**

The unlock code is originally set to 0000. Your service provider may change this number before you receive your radio.

SEE ALSO

[PIN Protect](#)

[Writing Text](#)

[Changing PIN Code](#)

2.7.1 Unblocking Your Radio

Prerequisites:

You blocked your radio by entering incorrect PIN code for three times (by default).

Procedure Steps

- 1 Radio displays **Unit Blocked Enter PUK**.
- 2 Enter 8-digit PUK (Personal Unblocking Key) number.



NOTE

The PUK is an eight-digit master code provided by your service provider.

- 3 Enter the new PIN code twice.
-

2.8 Locking/Unlocking the Keys/Buttons

Press MENU key and Left NAVIGATION key.



NOTE

The EMERGENCY button is not locked. Entering Emergency Mode unlocks all keys.

SEE ALSO

[Keylock Setup](#)

2.9 Holding Your Radio

The radio has two microphones: a top microphone for simplex dispatcher/private calls and a bottom microphone for duplex telephone-like calls.



NOTE

When possible, it is recommended to speak into the top microphone.

When using low audio, hold your radio as you would a telephone. Speak into the bottom microphone. Listen via the earpiece. Keep the antenna at least 2.5 centimeters from your head and body.

When using high audio, hold the radio a vertical position with its top microphone 5 centimeters to 10 centimeters away from your mouth. Speak into the top microphone. Listen through the internal speaker. Keep the antenna at least 2.5 centimeters from your head and body.

Lapel/Shoulder Use

For Group and Private Calls turn your head towards your shoulder/lapel, and speak directly into the top microphone. Listen through the internal speaker.

Speakerphone Use

Place your radio 30 centimeters to 60 centimeters away from you. In a noisy environment, you move the radio closer to you for better transmission.

2.10 Setting Vertical Flip

When and where to use:

The feature is useful for a user who has to wear the radio on shoulder, belt, or lapel and at the same time wishes to read the display upside down.

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Display** → **Flip Display**.

- 3 Select one of the following:
 - **On** — To activate this feature.
 - **Off** — To deactivate this feature.

2.11 Entering TMO / DMO Mode

Procedure Steps

- 1 From the home screen, press **Optns**.

- 2 Select **Trunked Mode** / **Direct Mode**.

SEE ALSO

[Networks](#)

[Selecting Network Operation Mode](#)

2.12 Transmit Inhibit Mode

The Transmit Inhibit Mode is a mode in which the radio sends no radio transmissions. It is recommended to activate the mode in RF sensitive areas, for example hospitals, airplanes, where safety can be jeopardized due to transmission radiation.

To activate, select **MENU** → **More . . .** → **Networks** → **TXI Mode** → **Activate**.

In this mode, the radio does not transmit under any circumstances except for the Emergency Calls. All the functions and keys which cause transmission, for example registration to the network, changing talkgroup or folder, sending SDS messages, or pressing the PTT button are disabled. Any transmission trial causes the radio to display **Not Allowed In TXI Mode** notification and to play a tone.

Your radio can still receive:

- Group calls.
- Messages — stored in the **Inbox**.
- Private call attempts — stored in the **Missed Calls** list, without the option to respond.

When no danger to safety exists anymore (for example, you leave the RF sensitive area), you can deactivate the Transmit Inhibit Mode and the radio returns to standard operation.

You can deactivate the mode by selecting **MENU** → **More . . .** → **Networks** → **TXI Mode** → **Deactivate**, pressing One-Touch button, or implicitly when initiating an Emergency Call.

**NOTE**

RF Transmissions from the radio are prevented under the following conditions:

- TXI Mode is activated.
- Battery is removed.
- The radio is turned off.

2.13 Selecting a Talkgroup

From the home screen, use one of the following methods:

- Select **Optns** → **TG by abc**. Enter a talkgroup name and select the talkgroup name from the list.
- Select **Optns** → **TG by Folder**. Select a folder and then a talkgroup name.
- Press ROTARY KNOB and rotate it until the required talkgroup name is displayed. Press **Select** to confirm.

**NOTE**

If the ROTARY KNOB mode is set to **Scroll**, then you do not need to press it to enter scrolling mode.

**NOTE**

Your radio can have an access up to three levels of the folder structure.

2.14 Using Timed Talkgroup Change

This feature allows you to switch between the original and the predefined talkgroup (TMO or DMO) for a predefined time by using a One-Touch button. After the timer expires, your radio returns to the previously attached talkgroup.

Prerequisites:

Timed Talkgroup Change is assigned to One-Touch button.

Procedure Steps

- 1 Press and hold the One-Touch button.
- 2 Your radio switches the talkgroup for a predefined amount of time.

**NOTE**

To start a group call press PTT.

Your service provider can assign a function to the second press of the One-Touch button to:

- Return to original talkgroup
- Restart the predefined time
- No action

-
- 3 When the group call ends, your radio switches to the original talkgroup after the predefined time.
-

2.15 Activating Talkgroup Scanning

When and where to use:

If you want to monitor any TMO Group Call in the defined talkgroup list.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **More . . .** → **Group Setup** → **Scan** → **Scanning**.
 - 3 Select **Select List** and then a list name.
Step result: Your radio displays list name **Selected**.
 - 4 Select **Scanning** → **On**.
-

Result:

Your radio is scanning on the predefined scan list.

SEE ALSO[Scan](#)

2.16 Dialing through Soft Numeric Keypad

Prerequisites:

Direct Private Number Dialing is assigned to a right NAVIGATION key.

Procedure Steps

- 1 From the home screen, press and hold right NAVIGATION key.

Step result: Your radio displays dialing number prompt.

- 2 Rotate the ROTARY KNOB or press up/down NAVIGATION key to choose the number, then press the knob or right NAVIGATION key to go to the next digit.

**NOTE**

- You can enter # at the end when the Speed Dialing feature is enabled.
 - The + sign you can enter only when you are editing the first position. Both signs are available after digit 9.
-

- 3 Press PTT.
-

2.17 Broadcast Call

The Broadcast Group Call (also called Site Wide Call) is a high-priority group call from the console operator (or dispatcher) to all users located at one or more sites. The radios are configured to monitor a Broadcast Call, but you cannot talk back. The call can be received as a normal Broadcast Call or an Emergency Broadcast Call. The Broadcast Call preempts an ongoing Group Call that has the same or lower call priority.

2.18 Ambience Listening (AL) Call

This feature allows a console operator (or dispatcher) to establish a special call with a specific radio. It enables to listen to the conversations and background noises within the range of the radio microphone. The call is set up without any indication to the affected radio, and any lower priority ongoing voice call may be preempted.

After accepting the call, the radio transmits in a simplex call without any action from or indication to the user. The Ambience Listening Call automatically ends when you initiate any voice call, switch to Emergency or TXI Mode, or send Emergency Alarm.

2.19 One-Touch Button Feature

To use One-Touch Button feature press and hold an assigned key to activate one of the following features:

Table 2-7 One-Touch Button Features

Feature	Description
Backlight	Switches backlight settings.
TMO Talkgroup Scan	Turns on/off the Talkgroup Scan feature in TMO Mode.
DMO / TMO Switch	Switches between TMO and DMO Mode.
Sending Status	Sends a dedicated status message to a dedicated address.
Flip Display	Rotates the display.
Change Talkgroup	Changes the talkgroup to the predefined by your service provider.
Hi/Low Audio	Activates high/low audio.
Sending User Defined Message	Sends a predefined/user defined template to a dedicated address.
Transmit Inhibit (TXI)	Turns on/off TXI Mode.
Private Call	Initiates a private call to a predefined entry in the contact list.
Phone Call	Initiates a phone call to a predefined entry in the contact list.
PABX Call	Initiates a PABX call to a predefined entry in the contact list.
Screen Saver	Turns on/off the Screen Saver feature.
Display Time	Shows time and date on a display.
Covert Mode	Turns on/off the Covert Mode.
Change Audio Profile	Changes the audio profile.
Howling Suppression	Toggles on/off Howling Suppression.
Man Down	Turns on/off Man Down feature.
Initiate Call-Out Fallback Alert	Sends Fallback Alert.
Previous Talkgroup	Switches the radio to the previously used talkgroup.
Display OPTA	Displays Operative Tactical Address.
Scroll Audio Profiles	Scrolls through all available audio profiles.
Direct Private Number Dialing	Initiates private number dialing editor.
Toggle RF Power Class	Toggles the RF Power High/Normal.
GPS Status Message	Sends your GPS location in a message to a dedicated address.
Connect/Disconnect RSM Earpiece	Connects/Disconnects RSM earpiece.
Repeater Mode	Turns on/off the Repeater Mode.
Default Settings	Resets all the radio settings to the default.
Speaker Enable / Disable Per Call	Enables speaker during the call.
Timed Talkgroup Change	Initiates the Timed Talkgroup Change feature. While in the predefined talkgroup, it can be assigned to the second press function.

**NOTE**

All the features can be assigned on the option buttons for RSM accessories.

2.20 Terminal Temporary Disable/Enable

Your radio is provided with a feature that allows your service provider to disable it temporarily in case it is stolen. When your radio is disabled or is powered up in disabled state, it looks and acts like it is turned off.

If your radio is found, your service provider can enable it again over the air. After your radio is enabled, you may resume normal operation.

2.21 Terminal Permanent Disable

Your radio is provided with a feature that allows your service provider to disable it permanently in case it is stolen or lost. When your radio is disabled permanently, it becomes inoperable. After a Permanent Disable your service provider cannot enable your radio. It is recommended to Permanent Disable your radio only when you do not expect to recover it. If it is recovered then a Permanent Disable radio can be reactivated by returning it to Motorola.

2.22 High/Low Audio Toggle

The user is able to switch from the external earpiece to the main speaker using SPEAKER CONTROL key and is not required to disconnect the external earpiece or PHF.

The states of the routed audio are:

- **Speaker HIGH** — indicates that audio is routed to the main speaker.
- **Speaker LOW** — indicates that audio is routed to the earpiece or PHF earpiece, and not to the main speaker.

2.22.1 Using High Audio

When and where to use:

Use it when placing and receiving a Group, Phone and Private calls.

Procedure Steps

- 1 Hold your radio in a vertical position with its top microphone 5–10 centimeters away from your mouth.
- 2 Speak into the top microphone and listen through the internal speaker.
Keep the antenna at least 2,5 centimeters from your head and body.

2.22.2 Using Low Audio

When and where to use:

Use it when placing and receiving a Phone, PABX, and Duplex Private calls.

Procedure Steps

- 1 Hold your radio as you would a telephone.
- 2 Speak into the bottom microphone and listen through the earpiece.
Keep the antenna at least 2,5 centimeters from your head and body.

2.23 During the Call

During the call, label of the right SOFT key indicates the next possible change. Accessory default setup is:

Table 2-8 During the Call

Soft Key Label	Audio Setting
Spkr	Audio goes to the main speaker (Speaker HIGH is displayed)
Erpce	Audio goes to the earpiece (Speaker LOW is displayed)
PHF	Audio goes to the Personal Hands Free (Speaker LOW is displayed)

2.24 Writing Text

Every time that you see text entry screen, refer to this section.

To enter text, use the ROTARY KNOB or the up/down NAVIGATION key.

To change the text entry mode, press and hold the right NAVIGATION key.

SEE ALSO

[Unlocking Your Radio](#)

2.24.1 Text Entry Icons

In the text entry screen, icons tell you which text entry mode and method you are using. A character counter displayed on the text entry icon, indicates the amount of characters that can be entered.

Press and hold right NAVIGATION key or press and hold ROTARY KNOB to toggle through the text entry modes.

Table 2-9 Text Entry Screen Icons

Icons	Description
ABC	A-Z – all capitals
abc	a-z – no capitals
123	Enter numbers and symbols: 0-9 # \$ % & ' () * + , - . : ; < = > ? @ [\] ^ _ { } ~ ¡ ¢ £ ¤ ¥ ¦ § ¨ © ª « ¬ ® ¯ ° ± ² ³ ´ µ ¶ · ¸ ¹ º » ¼ ½ ¾

2.24.2 Keys Usage

Table 2-10 Keys Usage

Key	Description
Send	Press to send the message. You have a choice to send it to a Private user or a Group.
Delete	- Press once to delete the highlighted character. - Press and hold to clear the entire main text area.
Up NAVIGATION key	Press to scroll through the letters, or numbers or symbols.
Down NAVIGATION key	Press to scroll through the letters, or numbers or symbols.
Right NAVIGATION key	- Press to navigate to the right. - Press and hold to change entry mode. - Press to add a new letter at the end of the text (a, A or 0).
Left NAVIGATION key	Press to navigate to the left.
MENU	Opens the Editor Menu to store the message as a template or save changes.
ROTARY KNOB	- Press to add new letter (a, A or 0). - Press and hold to change entry mode. - Rotate to scroll through the letters, or numbers or symbols.

2.25 Home Display Text Message

Your radio is provided with a feature that allows your service provider to send special text messages to the display. The message stays on the home screen until a new message is received. Power cycle your radio to replace the Home Display message to the predefined one.

3 Modes

This chapter contains information on available modes that the radio can operate in.

3.1 Using Networks

Procedure Steps


- 1 From the home screen, press MENU key.
 - 2 Select **More . . . → Networks**.
 - 3 Select one of the following:
 - **Trunked Mode**
 - **Direct Mode**
 - **Repeater Mode**
 - **TXI Mode**
-

Result:

Your radio switches to the selected mode.

3.2 Trunked Mode Operation

Trunked Mode Operation requires the switching and management infrastructure. This operation mode enables various voice and data communication types (for example, group calls, short data service messages) and access to the infrastructure-related features (for example, packet data).

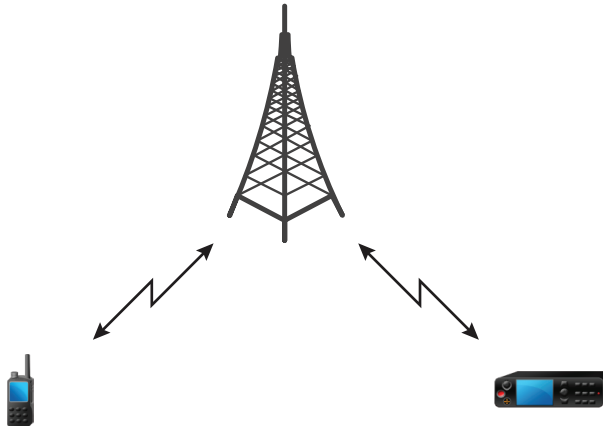Figure 3-1 Trunked Mode Operation

3.2.1 Entering TMO Mode

Procedure Steps

- 1 From the home screen, press **Optns**.
- 2 Select **Trunked Mode**.

3.2.2 Selecting a Talkgroup

From the home screen, use one of the following methods:

- Select **Optns** → **TG by abc**. Enter a talkgroup name and select the talkgroup name from the list.
- Select **Optns** → **TG by Folder**. Select a folder and then a talkgroup name.
- Press ROTARY KNOB and rotate it until the required talkgroup name is displayed. Press **Select** to confirm.



NOTE

If the ROTARY KNOB mode is set to **Scroll**, then you do not need to press it to enter scrolling mode.



NOTE

Your radio can have an access up to three levels of the folder structure.

3.2.3 Making a Group Call in TMO

The Group Call is received by all members of the selected group who have their units turned on and are in range.

Procedure Steps

- 1 Press and hold the PTT button.
- 2 Wait for the *Talk Permit* tone (if configured) and then speak into the microphone. Release the PTT button to listen.



NOTE

To cancel making a group call, do one the following actions before the talk permit is granted (depending on your service provider's settings):

- Release the PTT button.
- Press the END key (default).

When the call is canceled, your radio displays **Call cancelled** message (if configured by your service provider).

3.2.4 Receiving a Group Call in Idle

Procedure Steps

- 1 The radio receives a Group Call.



NOTE

The incoming Group Call is signalled by a *Receiving Group Call* tone.

- 2 To respond, press and hold the PTT button.
-

3.2.5 Receiving a Group Call during an Ongoing Group Call

While in active Group Call, your radio receives a Group Call with a higher priority.

One of the following occurs:

- Your radio is forced to end the current group call and automatically join the incoming one.
- Your radio displays incoming group call screen with options:
 - **Join** — ends current Group Call and starts the incoming one.
 - **End** — cancels the incoming Group Call.

3.2.6 Dynamic Group Number Assignment (DGNA)

DGNA allows the network operator to dynamically manage talkgroups on your radio over the air interface. Using DGNA, the network operator can:

- Add talkgroups.
- Attach or select newly added talkgroups.
- Delete talkgroups.
- Modify parameters of existing talkgroups.

All the above operations are performed by transmitting data to your radio.

3.2.7 DGNA Reception

When a DGNA message is received, your radio plays a tone and displays a message **Talkgroup list updated**. If enabled by your service provider, your radio displays all added and deleted talkgroup list. If the DGNA message is received to delete all talkgroups, your radio displays **All Talkgroups Deleted**. You can use the **View**, **Attach**, **Back**, MENU key, ROTARY KNOB, END key, and EMERGENCY button. Pressing any of them exits the DGNA display.

3.2.8 DGNA Auto Select Group

If the DGNA Auto Select is configured, whenever your radio receives a DGNA, it switches to the added talkgroup.

3.2.9 Viewing DGNA Talkgroups

Prerequisites:

Your radio receives the DGNA message.

Procedure Steps

-
- 1 To view the added talkgroups details press **View**.
 - 2 Scroll through the list to select required talkgroup.
 - 3 To select the DGNA group, press **Attach**.
-

3.2.10 Broadcast Call Initiated by User

This feature allows you to make a Broadcast Call from the radio that is initiated on the predefined talkgroup. Your service provider predefines the alias and the priority of the Broadcast Call.

**NOTE**

If the type of the encryption is defined by the SIM Card, the Broadcast Call is always clear. Otherwise if the radio uses other encryption service the type of the encryption used for that Call is up to the encryption settings of that service.

**NOTE**

This feature is not supported on the Dimetra infrastructure.

3.2.11 Initializing Broadcast Call

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **More . . .** → **Services** → **Broadcast**.
Step result: Your radio displays the predefined alias and the Broadcast Call icon.

- 3 To start the call press the PTT button.

3.2.12 Phone and PABX Calls

The Phone Call allows you to call a landline telephone number or a cellular mobile phone number. The Private Automatic Branch Exchange (PABX) Call allows you to call local (office) extension numbers.

3.2.13 Private Call

The Private Call, also called point-to-point, or individual call, enables calling between two individuals. No other radio can hear the conversation. This call type can be carried out in two ways:

- Duplex call (if the system allows), in TMO Mode. Both parties can speak at the same time.
- Simplex call, in TMO or DMO Mode. Only one party can speak at a time.

When a DMO Private Call takes place, radios not involved in this call receive the channel busy indication. The radios are identified using its radio numbers.

3.2.14 Making a Private Call

Prerequisites:

Direct Private Number Dialing is assigned to a right NAVIGATION key.

Procedure Steps

- 1 From the home screen, press and hold right NAVIGATION key and enter the number.

- 2 If **Private** is not the first type of call presented, press **Ctype** repeatedly to select it.

- 3 When you are in the following mode:
 - a. TMO — For a simplex call, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For a duplex call, press and release SEND key. You hear a ringing tone.
 - b. DMO — Only simplex call is available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.

- 4 To end the call, press the END key.

3.2.15 Assistance Call

This feature allows you make a private call to ask for assistance during normal and non-critical situations.



NOTE

Your service provider can configure the number, priority, and the type of the call (simplex or duplex).

You can start an Assistance Call in one of the following way:

- Dial a predefined number and press SEND key.
- **Menu** → **More . . .** → **Services** → **Assistance Call**

3.2.16 Call Modification

Call Modification is a feature that allows your service provider to modify the call in order to optimize it and adjust to a current situation.

Modification can cover:

- Call priority — modified during call setup.
- Call type — modified during call setup.
- Call encryption — modified during an ongoing call (but not in the transmission phase).

When the call is modified, your radio displays **Call Modified** message.

When a recently modified call requires the PTT button to transmit, your radio displays **Call Modified Use PTT**.

All modifications are made by your service provider and the radio only follows them. You have no influence on ongoing call modifications.

When call priority is changed to emergency:

- The display indicates that an Emergency Group Call has been received.
- The radio plays a special audio alert.



NOTE

If a Group Call is modified into an Emergency Group Call, no emergency related features are triggered.

If call modification requested by your service provider cannot be followed by the radio (due to its settings), the radio rejects it and displays **Service Not Available** message.

3.3 Local Site Trunking

This mode is also called as Fallback Mode and it allows more than one radio from the same site to communicate when the link between the site and the network central controller fails. Entering and exiting Local Site Trunking (that is, returning to System Wide Services) is done automatically. In this mode some services are unavailable.



NOTE

Your service provider can disable this mode.

3.3.1 Entering Local Site Trunking

When your radio receives a Local Site Trunking indication from the system, the following occurs:

- Your radio plays an Entering Local Site Trunking tone.
- Display shows the **Local Area Service** message.
- Display icons and soft keys turn olive.
- Any call in progress is dropped upon entering Local Site Trunking Mode.

If configured by your service provider, this message/alert is periodically repeated to remind you that your radio is still operating in Local Site Trunking Mode. The following features are available:

- Registration
- Attachment
- Group Call
- Emergency Call
- Emergency Alarm



NOTE

Your service provider can turn on/off all the visual and audio indications, when you enter Local Site Trunking Mode.

3.3.2 Exiting Local Site Trunking

When the link with the central network controller is reestablished, your radio exits Local Site Trunking, and the following occurs:

- Your radio plays an Exiting Local Site Trunking tone.
- Any call in progress during Local Site Trunking is dropped.
- Display icons and soft keys turn blue.




NOTE

Your service provider can turn on/off all the visual and audio indications, when you exit Local Site Trunking Mode.

3.4 Direct Mode Operation

Direct Mode Operation is a mode of simplex operation where radios communicate directly.

Figure 3-2 Direct Mode Operation

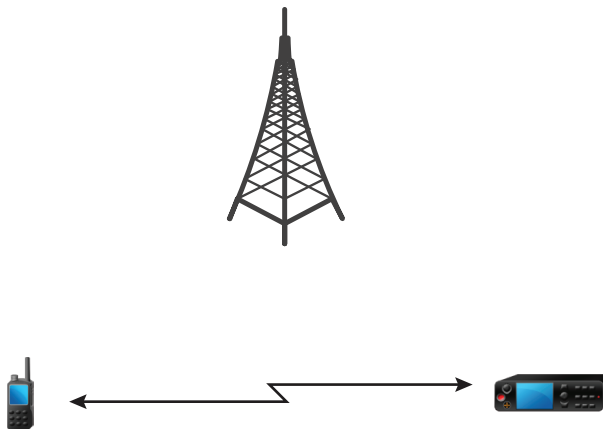

3.4.1 Entering DMO Mode

To enter the DMO Mode:

- From the home screen, press MENU key. Select **More . . .** → **Networks** → **Direct Mode**.
- From the home screen, select **Optns** → **Direct Mode**.

3.4.2 Selecting a Talkgroup

From the home screen, use one of the following methods:

- Select **Optns** → **TG by abc**. Enter a talkgroup name and select the talkgroup name from the list.
- Select **Optns** → **TG by Folder**. Select a folder and then a talkgroup name.
- Press **ROTARY KNOB** and rotate it until the required talkgroup name is displayed. Press **Select** to confirm.



NOTE

If the **ROTARY KNOB** mode is set to **Scroll**, then you do not need to press it to enter scrolling mode.



NOTE

Your radio can have an access up to three levels of the folder structure.

3.4.3 Making a Group Call in DMO

The Group Call is received by all members of the selected group who have their units turned on and are in range.

Procedure Steps

- 1 Press and hold the PTT button.
 - 2 Wait for the *Talk Permit* tone (if configured) and then speak into the microphone. Release the PTT button to listen.
-

3.4.4 Receiving a Group Call in Idle

Procedure Steps

- 1 The radio receives a Group Call.



NOTE

The incoming Group Call is signalled by a *Receiving Group Call* tone.

- 2 To respond, press and hold the PTT button.
-

3.4.5 Private Call

The Private Call, also called point-to-point, or individual call, enables calling between two individuals. No other radio can hear the conversation. This call type can be carried out in two ways:

- Duplex call (if the system allows), in TMO Mode. Both parties can speak at the same time.
- Simplex call, in TMO or DMO Mode. Only one party can speak at a time.

When a DMO Private Call takes place, radios not involved in this call receive the channel busy indication. The radios are identified using its radio numbers.

3.4.6 Making a Private Call

Prerequisites:

Direct Private Number Dialing is assigned to a right NAVIGATION key.

Procedure Steps

- 1 From the home screen, press and hold right NAVIGATION key and enter the number.

- 2 If **Private** is not the first type of call presented, press **Ctype** repeatedly to select it.

- 3 When you are in the following mode:
 - a. TMO — For a simplex call, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For a duplex call, press and release SEND key. You hear a ringing tone.
 - b. DMO — Only simplex call is available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.

- 4 To end the call, press the END key.

3.4.7 Private Call With Presence Check

This feature allows you to see if the calling party is available in DMO. When this feature is enabled, you can only initiate a Private Call if the called radio is present on the same channel and responds with a presence check acknowledgement.

Otherwise your radio displays **Party not available**.

3.4.8 Talkgroup for Individual Calls

Talkgroup for Individual Calls is a talkgroup that operates on a separate frequency allocated for individual (private) calls only. Using this talkgroup optimizes frequency resources and helps not to block other talkgroups. The only supported call types are: private calls and emergency calls (both private and group). Use this talkgroup each time you need to make a private call.


When you select a Talkgroup for Individual Calls, your radio is not able to receive or initiate any group or broadcast calls with priority lower than Emergency.

When you have selected a Talkgroup for Individual Calls and press the PTT button to start a Group Call, the radio:

- Rejects the call
- Plays a tone
- Displays **Individual Only** message

3.4.9 Communication through Repeater


Radios that cannot communicate directly one with another in DMO Mode can do it through the repeater. The repeater is a radio that repeats all communication on a chosen channel, and as a result increases radios' DMO range.

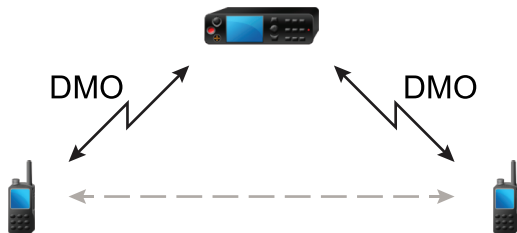

When the radio connects to a repeater, it plays a tone and displays the **Repeater available** message. When the radio loses connection with the repeater, it plays a tone and displays the **Repeater not available** message. Messages and sounds are configured by the service provider.

3.4.10 Communication through Gateway

Gateway provides connectivity between radios operating in DMO Mode and the TETRA network, so that the DMO radios can communicate with the TMO radios.

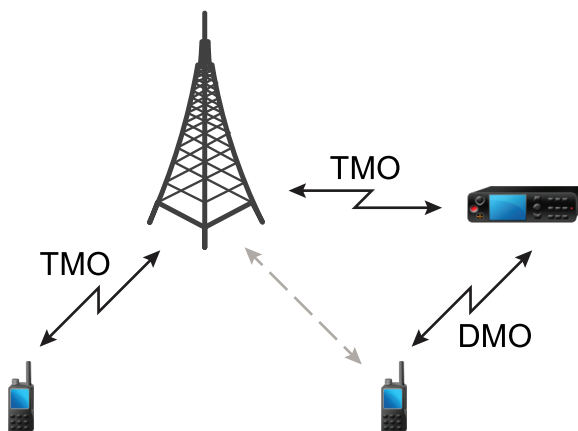

When the radio connects to a gateway, it plays a tone and displays the **Gateway available** message. When the radio loses connection with the gateway, it plays a tone and displays the **Gateway not available** message. Messages and sounds are configured by the service provider.

3.4.11 Selecting DMO Group Call Options

When and where to use:

Helps to communicate with other radio users on the same talkgroup through the Gateway or Repeater.

Procedure Steps

- 1 From the home screen, press **Optns**.
- 2 Press **Config**.
- 3 Select one of the following:
 - **MS - MS** — Your radio can communicate only with other radios within its range.
 - **Gateway** — Your radio uses a gateway to communicate with the infrastructure.
 - **Automatic** — Your radio uses the first available gateway for that talkgroup.
 - **Specific** — Your radio uses only the Gateway with the specified Gateway address for that talkgroup. If your radio displays **Selected Gateway:None**, press **Edit** to enter the current gateway address.
 - **Repeater** — Uses the first available repeater for that talkgroup.
 - **GW + Rep** — Uses the first available gateway or repeater for that talkgroup.
 - **Automatic** — Uses the first available gateway for that talkgroup.
 - **Specific** — Uses only the Gateway with the specified Gateway address for that talkgroup. If your radio displays **Selected Gateway:None**, press **Edit** to enter the current Gateway address.



NOTE

When the Gateway and the Repeater cannot be communicated even though a talkgroup to use them is configured, the radio attempts the direct MS-MS communication.

Result:

When your radio detects the appropriate Gateway and/or the Repeater, the Gateway and/or Repeater icons turns solid, respectively.

3.5 Transmit Inhibit Mode

The Transmit Inhibit Mode is a mode in which the radio sends no radio transmissions. It is recommended to activate the mode in RF sensitive areas, for example hospitals, airplanes, where safety can be jeopardized due to transmission radiation.

To activate, select **MENU** → **More . . .** → **Networks** → **TXI Mode** → **Activate**.

In this mode, the radio does not transmit under any circumstances except for the Emergency Calls. All the functions and keys which cause transmission, for example registration to the network, changing talkgroup or folder, sending SDS messages, or pressing the PTT button are disabled. Any transmission trial causes the radio to display **Not Allowed In TXI Mode** notification and to play a tone.

Your radio can still receive:

- Group calls.
- Messages — stored in the **Inbox**.
- Private call attempts — stored in the **Missed Calls** list, without the option to respond.

When no danger to safety exists anymore (for example, you leave the RF sensitive area), you can deactivate the Transmit Inhibit Mode and the radio returns to standard operation.

You can deactivate the mode by selecting **MENU** → **More . . .** → **Networks** → **TXI Mode** → **Deactivate**, pressing One-Touch button, or implicitly when initiating an Emergency Call.

**NOTE**

RF Transmissions from the radio are prevented under the following conditions:

- TXI Mode is activated.
- Battery is removed.
- The radio is turned off.

3.6 Emergency Mode

The Emergency Mode is a mode of the highest communication priority.

In the Emergency Mode, the radio automatically rejects phone, PABX and private calls, and does not monitor the talkgroups in the selected scan list. However, if an ATG is the selected group, the radio monitors the sub-groups associated with the ATG.

On entering the Emergency Mode, any ongoing voice call is aborted or cleared down. Any packet data transfer in progress is aborted. However, the session is kept open.

The radio remains in the Emergency Mode until you or the originator ends the Emergency Group Call.

Pressing the EMERGENCY button or entering Emergency number and pressing SEND key, can be used to activate one or more services (depends on the service provider setting):

- Entering Emergency Mode
- Sending Emergency Alarm
- Starting Hot Mic operation
- Starting Emergency Individual Call
- Powering up the radio in Emergency Mode
- Sending the GPS location information

**NOTE**

- Entering Emergency Mode even if TXI Mode is activated, causes immediately your radio to transmit. When entering the Emergency operation, your radio should not be within the RF sensitive area any longer.
- Your radio interrupts the AL call, when you trigger Emergency Mode.

If the radio user wishes to finish Emergency Call, a confirmation pop-up appears to avoid unintentional disconnects.

3.6.1 Emergency Group Call

While in the Emergency Mode, you are able to initiate and receive an Emergency Group Call. This special call is initiated by pressing the EMERGENCY button.

If a radio receives an incoming Group Call with emergency priority, the display shows that an Emergency Group Call has been received, and a special audio alert is played. Your radio automatically switches to the Emergency Mode.

The audio for an Emergency Group Call always goes through the speaker (high audio), even if the low audio is selected.

An Emergency Group Call can be configured as:

- Non-tactical — call on a talkgroup predefined by your service provider. The group might be different than the one selected initially. After exiting from non-tactical Emergency Mode the radio is attached to the group that was selected before initiating the non-tactical call. When in non-tactical Emergency Mode, you are not able to switch talkgroups. DGNA messages have no impact during non-tactical Emergency Mode but only after exiting the non-tactical Emergency Mode.
- Tactical — call on the currently selected talkgroup.

Emergency Group Calls in TMO

If the radio enters Emergency Mode while the Emergency Broadcast Call is active, the radio continues on the call without initiating any calls and sends an Emergency Alarm. The behavior depends on your service provider settings.

When the Emergency Group Call you participate in terminates, your radio can behave in several ways, depending on your service provider settings:

- If you are the call initiator, the radio can either stay in the Emergency Mode, or return to TMO Mode.
- If you are not the call initiator, the radio always returns to TMO Mode.

Emergency Group Calls in DMO

In DMO, Emergency Group Calls through a gateway are supported.

3.6.2 Emergency Private Call

The Emergency Private Calls are Simplex or Duplex Private Calls with emergency priority. On pressing the EMERGENCY button, the radio initiates a Private Call with emergency call priority to the provisioned address. No Emergency Alarm is sent and your radio does not enter the Emergency Mode. This pseudo emergency state (all user indication and rejection of other services) ends as soon as the Emergency Private Call ends.

3.6.3 Emergency MS-ISDN Call

The Emergency MS-ISDN calls are simplex or duplex telephone calls with emergency priority. On pressing the EMERGENCY button, your radio initiates an Emergency MS-ISDN call to the predefined MS-ISDN number.

The MS-ISDN call type (simplex or duplex) is predefined by your service provider.

3.6.4 Emergency Alarm

The Emergency Alarm is a special status message sent to the infrastructure on entering the Emergency Mode. The radio may wait for infrastructure acknowledgment for this alarm and attempt retries.

Each time the radio enters the Emergency Mode, it sends an Emergency Alarm. When an Emergency Alarm is sent successfully, your radio plays Emergency Alarm Sent tone. Due to absence of the delivery confirmation in DMO Mode, Alarm Sent information confirms only sending the alarm.

In addition, once the radio is in the Emergency Mode on pressing the EMERGENCY button, an additional Emergency Alarm is sent. The message can be dispatched both in TMO and DMO Modes.



NOTE

Your service provider can disable the Emergency Alarm feature.

3.6.5 Hot Microphone

The Hot Microphone allows you to talk without pressing the PTT button on entering the Emergency Mode. The transmission continues for a provisioned amount of time.

Pressing the PTT button before the Hot Microphone time expires ends the transmission. Then normal PTT operation takes over (that is, the transition is ongoing for the time the PTT button is held). Subsequent EMERGENCY button presses during the Emergency Mode initiates the Hot Microphone transmission again.

If a talk permit is granted to another member of the group, the Emergency Call received tone is played. If configured, the radio automatically attempts to get talk permit again.

3.6.6 Alternating Hot Microphone

The Alternating Hot Microphone is an enhancement of the Hot Microphone feature. It allows you to have the Hot Microphone switched on and off alternately.

If this feature is enabled, you can initiate the Alternating Hot Microphone by pressing the EMERGENCY button.

The Alternating Hot Microphone terminates when one of the following conditions is met:

- The radio exits the Emergency Mode.
- The Alternating Hot Microphone timer expires.
- The PTT button is pressed.
- **End** SOFT key is pressed (only during transmission time slot).

To skip your transmission time slot and jump to a receiving time slot, press END key.



NOTE

When the radio goes out of the service, it enters the receiving mode and the Alternating Hot Microphone is on hold. When the radio is back to the service, the Hot Microphone transmission and the Alternating Hot Microphone resume.

**NOTE**

When the user is in the Emergency Mode, pressing EMERGENCY button restarts the Alternating Hot Microphone.

3.6.7 Entering Emergency Mode

Press and hold the EMERGENCY button or enter the Emergency number and press SEND key to enter the Emergency Mode.

**NOTE**

The required time you need to press the EMERGENCY button is set to 1 second (by default). The time can be configured by your service provider.

Upon entry into Emergency Mode all private calls are rejected. The radio remains in Emergency Mode until you exit it.

3.6.8 Exiting Emergency Mode

Prerequisites:

Make sure that your radio is in Emergency Mode.

Procedure Steps

-
- 1 If your radio screen displays **Emgcy Mic On**, press **End**.
 - 2 Press and hold **Exit**.
 - 3 If your radio displays **Are you sure to exit Emergency?**, press **Yes** to exit.
-

Result:

Your radio exits the Emergency Mode.

3.6.9 Making an Emergency Group Call

Prerequisites:

Make sure that your radio is in Emergency Mode.

Procedure Steps

- 1 Press and hold the PTT button.
 - 2 Wait for the talk permit tone (if configured) and talk.
 - 3 Release the PTT button to listen.
-



NOTE

To cancel the Emergency Group Call, release the PTT button before the *Talk Permit* tone is played.

3.6.10 Receiving an Emergency Group Call

A radio receives an Emergency Group Call from the selected pre-programmed group. Audible tone indicates incoming Emergency Group Call.

3.6.11 Disaster Alert Call

This feature allows you to make Disaster Alert Call in critical and catastrophic situations by making Emergency Broadcast Call from the radio on a predefined talkgroup. No other services can interrupt this type of the call, except Emergency or other Disaster Alert call. You can send and receive either in TMO or DMO Mode. Your radio can receive this type of call on predefined talkgroups. The predefined talkgroups for the Disaster Alert Call are always scanned. The Disaster Alert Call ends after you release the PTT button.



NOTE

This call stays clear only, even if any of the encryption services are enabled.

Your service provider defines if the Disaster Alert Call is initiated on a predefined talkgroup.

3.6.12 Initializing Disaster Alert Call

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Services** → **Disaster Alert**.
Step result: Your radio enters Disaster Alert Mode and it displays Disaster Alert icon.
- 3 To start the call press PTT.
Step result: Your radio displays **Disaster AlertIn Use**.

3.6.13 Silent Emergency Mode

The Silent Emergency Mode is a type of emergency services that provides no audible indications and no keypad tones at the entrance. All the display indications are as in the idle mode. However, the radio cannot use any services except for:

- Receiving Ambience Listening
- Sending Silent Emergency Alarms
- Sending GPS location reports



NOTE

If you try to activate any other feature, it is blocked and no indication is displayed.

If the Silent Emergency feature is enabled, the radio enters Silent Emergency Mode on pressing the EMERGENCY button. After entering the Silent Emergency Mode, the radio guarantees itself to be in TMO Mode. The radio stays in TMO Mode or switches to it, depending on the actual state. Once in TMO Mode, the radio sends Silent Emergency Alarm.



NOTE

If the radio is in a private or group call, the radio waits until the call ends and then enters the Silent Emergency Mode.

The radio keeps re-sending the alarm until successful sending is confirmed. After the alarm is successfully delivered, the radio stays in Silent Emergency Mode and waits for the Ambience Listening. On pressing the EMERGENCY button again, while being in the Silent Emergency Mode, the radio sends the Silent Emergency Alarm (and does not provide any audible or visible indications).

Your radio exits the Silent Emergency Mode, under the following conditions:

- Press MENU simultaneously with right NAVIGATION key.
- Press both SOFT keys simultaneously.
- No success in sending the Silent Emergency Alarm and the maximum number of retries has been reached.

- The control room terminates the Silent Ambience Listening.
- The Ambience Listening is disconnected due to another reason.

If you turn off the radio in the Silent Emergency Mode, the radio switches to pseudo power off state. In this state, the radio appears to be turned off. However, the radio is still on and in the Silent Emergency Mode. On turning the radio on during the pseudo power off state, the radio acts as during turning on and still is in the Silent Emergency Mode.

3.7 Repeater Mode


The Repeater Mode provides repeater connectivity between radios operating in the DMO Mode.



NOTE

Only the radios on the same talkgroup can communicate with each other through the repeater.

Figure 3-3 Repeater Mode Operation

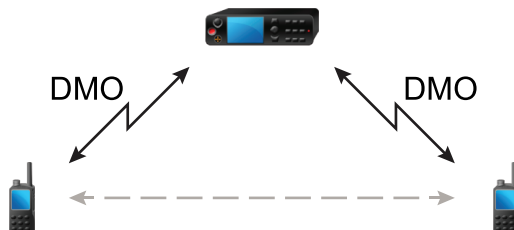

3.7.1 Entering Repeater Mode

To enter Repeater Mode, use one of the following ways:

- From the home screen, select **Optns** → **Repeater Mode**.
- From the home screen, press MENU key. Select **More . . .** → **Networks** → **Repeater Mode**.

3.7.2 Setting Monitor Option

Procedure Steps

- 1 From the home screen, press **Optns.**
 - 2 Press **Monitor**.
 - 3 Select one of the following:
 - **Off** — Your radio works as a repeater only, no operation is available.
 - **Receive Only** — Allows you to listen.
 - **Receive & Transmit** — Allows you to listen and transmit by pressing PTT.
-

3.7.3 Encryption in Repeater Mode

While in the Repeater Mode, the radio supports Air Encryption and is able to repeat encrypted calls and messages.

If SCK keys installed on the radio are invalid:

- The radio transfers calls and messages without deciphering them (provided that the encryption level is not the highest).
- The LED indicator turns orange.
- On pressing the PTT button, **Channel Busy** or **DMSCK Invalid** message appears.
- You cannot make any call.

4 GPS Location Service

The GPS Location Service feature uses information from Global Positioning System (GPS) satellites orbiting the Earth to determine the approximate geographical location of your radio.

The GPS Location Service availability, accuracy, and the position calculation time vary depending on the environment in which you use the radio. The GPS Location Service can assist your dispatcher or colleagues in many ways such as more efficient deployment of resources or locating your radio when you trigger your emergency service.

The radio can display the location information directly on the screen or send it over the air to your Dispatcher to display it in the control center. Check your radio configuration details with your service provider.



IMPORTANT

Where the signals from satellites are not available, the GPS Location Service does not work. This situation usually happens when your radio cannot establish a view of a wide area of open sky, for example, when your GPS antenna is covered or facing the ground. Such situations include being:

- In underground locations
- Inside buildings, trains, or other covered vehicles
- Under any other metal or concrete roof or structure
- Near a powerful radio or television tower
- In extreme temperature outside the operating limits of your radio

Even if your location information can be calculated in such situations, it may take longer to do so. Therefore, in any emergency situation, always report your location to your dispatcher. Where adequate signals from multiple satellites are available, your GPS Location Service feature provides a location, most probably near to your actual location. For GPS feature performance, under ideal test conditions see Table “GPS Specification”

The radio can be triggered to send Location Reports in various circumstances, for example:

- Upon a request
- Entering Emergency Mode
- At specified time intervals
- At specified distance intervals

The Location Reports can be sent in two ways using:

- SDS
- Packet Data

If the Location Reports are sent over the Packet Data, a Packet Data icon is displayed when the message is being sent.

If the Location Reports are sent via SDS with User Defined Data Type-4 as a transport layer, either the ETSI LIP or Motorola LRRP GPS Location Protocol is used. The LRRP GPS protocol either use SDS-TL (for added reliability) or Simple GPS with no SDS-TL (for saving air interface resources). GPS Protocol Identifiers are:

- LRRP SDS TL = 131
- LRRP Simple GPS = 3
- LIP GPS = 10

Location reports are sent in TMO and can also be provisioned to be sent in DMO. If the radio is provisioned to provide user indications, the feature operational status is indicated on the radio display.

Depending on the radio configuration, viewing the radio position and the status of the visible satellites is available. The position may consist of longitude and latitude, UK, or Irish grid coordinates. The GPS Location Service feature can be enabled or disabled as a whole using the CPS. It is possible to configure the feature parameters using the CPS, or over the air. The CPS configuration provides a default profile. The commands received over the air may overwrite the default profile configuration. The profile assigned to the radio determines when to send location data, what data to send with what accuracy and to what address. All data requests and configuration commands received over the air are checked to confirm they have come from a trusted source. Location reports are accepted only from authorized ISSIs or IPs, depending on the configured transport layer (SDS, Packet Data).

**NOTE**

Ensure the application receiving location messages and the radio are configured in a corresponding way. Otherwise the radio will reject all system GPS requests.

This is a selling feature.

SEE ALSO

[Location](#)

4.1 Enhancing GPS Performance

Sometimes the GPS feature is unable to complete a location calculation successfully. You hear an audible tone indicating that your radio cannot see the satellites.

To maximize the ability of your radio to determine a location fix please note the following guidelines:

- Stay in the open — The GPS feature works best where there is nothing between your radio and a large amount of open sky. If possible, go outside, away from tall buildings and foliage. While the performance in a building is improved by moving closer to windows, glass with certain sun shielding films may block satellite signals.
- Position your radio to enhance reception — Signals from GPS satellites are transmitted to your GPS antenna, which is in your radio antenna. Hold your radio away from your body, giving the antenna clear access to satellite signals. Do not cover the antenna area with your fingers or anything else.
- Stand still — If possible, stand still until your radio is finished determining your location. Moving your radio at a walking pace while your radio is calculating your approximate location may substantially decrease GPS performance.

4.2 Enabling GPS

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Location** → **Interface**.
- 3 Select **On**.



NOTE

Your service provider can enable this feature.

4.3 GPS Icon

When your radio receives a valid GPS location data, it displays a GPS icon.



NOTE

During Emergency Mode, your radio does not display the GPS icon even when receiving GPS location data. If valid GPS location data is available when you leave Emergency Mode the GPS icon is displayed again.

4.4 GPS Different Location Displays

Table 4-1 Different Location Displays

Latitude / Longitude	UK Coordinates	Irish Coordinates	UTM Coordinates	MGRS Coordinates
Time	Time	Time	Time	Time
Latitude	2-Letter Code	1-Letter Code	3-Letter Code	3-Letter Code and 2-Letter Code
Longitude	Easting and Northing Coordinate	Easting and Northing Coordinate	Easting and Northing Coordinate	Easting and Northing Coordinate
Altitude	Altitude	Altitude	Altitude	Altitude
Satellites	Satellites	Satellites	Satellites	Satellites

- Time — indicates when the last time the location was calculated. The time is provided in Universal Time Coordinated.
- Letter Code — grid zone or square on the map for different coordinate standard
- Latitude — expressed in degrees, minutes, and seconds.

- Longitude — expressed in degrees, minutes, and seconds.
- Number of satellites — used to calculate the location. In general, more satellites make for better accuracy. The maximum is 12 satellites.
- Easting — refers to the eastward-measured distance expressed in meters.
- Northing — refers to the northward-measured distance expressed in meters.



NOTE

Skipping each digit of easting and northing coordinates decreases the accuracy by the factor of 10.

4.5 Viewing Your Position

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Location** → **Position**.
- 3 Scroll to view the results about the last time your location was calculated.



NOTE

To refresh your position:

- Select **Position** — the radio refreshes its position automatically
 - Press **Refresh**
-

4.6 Changing GPS Accuracy

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Location** → **Accuracy**.
- 3 Select one of the following:
 - **Medium** (default) — Power consumption optimization is combined with less position accuracy.
 - **High** — Better position accuracy is combined with less power consumption optimization.



NOTE

If connected to an external charging device, the radio automatically enters the **High** mode.

4.7 GPS — Things to Keep in Mind

Where adequate signals from multiple satellites are not available, the GPS feature of your radio does not work. Such situations include but are not limited to:

- In underground locations
- Inside of buildings, trains, or other covered vehicles
- Under any other metal or concrete roof or structure
- Near a powerful radio or television tower

- When your GPS antenna is covered (for example, by your hand or other object) or facing the ground
- In temperature extremes outside the operating limits of your radio

Even where location information can be calculated in such situations, it may take longer to do so. Therefore, in any emergency situation, confirm your location with your dispatcher.

Furthermore, please note that even where adequate signals from multiple satellites are available, your GPS feature provides only an approximate location, often within 20–100 meters from your actual location.

5 Main Menu

This chapter contains information on items in the main menu.



NOTE

You can enter the menu items during a call. If you are viewing a menu when a new call starts, the radio exits the menu.

5.1 Scrolling through the Menu

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Scroll to the required item by pressing NAVIGATION keys. Press the SOFT key assigned as **Select** or right NAVIGATION key to select.
If the menu item contains a further set of menu items, repeat step 2.

SEE ALSO

5.2 Menu Icons

The following icons make it easy to identify the menu items at first glance.

Table 5-1 Menu Icons

Menu Icon	Description
	Main Menu Items / Context Sensitive Menu It is assigned to MENU when the main menu items / context-sensitive menu are active.
	Messages Send status messages, Send text messages (free text or according to user defined or predefined templates), Received messages in Inbox .
	Contacts Add, search, edit, or erase entries in the contact list.
	Browser Indicates the WAP browser.

Table 5-1 Menu Icons (cont'd.)

Menu Icon	Description
	Security Lets you turn on/off and verify security features, and change passwords.
	Setup Allows you to customize your radio.
	More... Contains additional setup menu items.

5.3 Menu Structure

Table 5-2 Menu Structure

Menu	
Messages	New Message
	Inbox
	Outbox
	CO Box
	WAP Box
	Templates
	Predefined
	Send Status
Contacts	[New Contact]
	<Name 1>
	<Name 2>
Security	PIN Protect
	Change Code
	Keylock Setup
	Lock Keypad
	Auto. Lock
	Delay
	Start Locked
	AirEncrypt
	K Validity
	TMSCK Validity
	DMSCK Validity
	DMO SCK
	Covert Mode
	On/Off

Table 5-2 Menu Structure (cont'd.)

Menu						
		Vibrate				
		Remote Control				
Man Down						
Setup	Vibrate	Vibe then Ring				
		Vibe Only				
		Ring Only				
		Details...	Duplex Calls	Vibe then Ring		
				Vibe Only		
				Ring Only		
			Simplex Calls	Vibe then Ring		
				Vibe Only		
				Ring Only		
			Group Call	Vibe On		
				Vibe Off		
			Messages	Vibe then Ring		
		Vibe Only				
		Ring Only				
		Ring Style		Duplex		
				Simplex		
		Set Volume				
		Language				
		Data Setup		Voice Only		
				Data Only		
				Voice & Data		
		Audio		Audio Profile		
				Howling Suppr.		
				Audio Toggle	Always Loud	
					Spkr Cntrl	
				Volume Adj. Mode	Individual	
					Common	
Tones		Keypad Tone				
		All Tones				
		Talk Permit	No Tone			
			Short Tone			

Table 5-2 Menu Structure (cont'd.)

Menu		
		Normal Tone
		Clear to send
		Tone On
		Tone Off
		Periodic Alert
		Alert
		Period
		D-PTT Tones
		D-PTT Mode
		Tone Style
		Single
		Double
		Triple
Display	Flip Display	
		Text Size
		Standard
		Zoom
		Extra Zoom
		Screen Saver
		Auto
		Disabled
		Backlight
		Auto
		Disabled
		Semi Auto
		On
		Wallpaper
		Contrast
Time & Date	Display	Time & Date
		Time Only
		Date Only
		Off
		Format
		Format Time
		Format Date
		Set
		Set Time
		Time Offset
		Set Date
		System Update
		Off
		Time Only
		Time & Offset
Energy Economy	EE Status	

Table 5-2 Menu Structure (cont'd.)

Menu		
	EE Selection	
RF Power	Hi RF Power	
	Normal RF Pwr	
Accry Setup	CORE RSM/PHF	
	CORE Earpiece	
	Other RSM/PHF	
	Other Earpiece	
	RSM Earpiece	
Book on	Book on Accept	
	Book on Reject	
Rotary Knob	Rotary Mode	Dual
		Volume
		Scroll
	Rotary Lock	Locked
		Unlocked
		Disable
	In Keypad Lock	Lock None
		Lock Volume
		Lock Scroll
		Lock Both
	Wrap Around	
	Scroll Range	Stay In Range
		Scroll To Next
	Confirm TG Sel.	
	Function Keys	Auto
		Volume Adjust.
		OTB Feature

Table 5-2 Menu Structure (cont'd.)

Menu				
More . . .	Group Setup	Scan	Scanning	On/Off
				Select List
				Active List
				Scan Lists
		My Groups	[New Folder]	
My Info		My Private Num		
		My Phone Num		
		Radio Info		
Recent Calls		Dialed		
		Received		
		Missed		
Shortcuts		[New Entry]		
RUI		Log on		
		Log off		
Networks		Networks Sel	Home Only	
			Foreign Net	
			Any Network	
			Select Net	
			Migrate To	
			Auto	
			Trunked Mode	
			Direct Mode	
			TXI Mode	
			Repeater Mode	
Location			Position	
			Interface	
			Accuracy	Medium
				High
Packet Data			Sent Data	
			Received Data	
			Bandwidth	
			Encryption	
Services			Broadcast	
			Assistance Call	

Table 5-2 Menu Structure (cont'd.)

Menu
Disaster Call

5.4 Messages

This feature allows you to send and receive text messages. A message can contain up to 1000 characters, depends on your service provider setting.

5.4.1 New Message

This menu item allows you to create a new message.

5.4.1.1 Sending a Message to Private/Phone

Procedure Steps

-
- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **New Message**.
 - 3 Enter your message and press **Send**.
 - 4 If needed, select **Private/Phone**.
 - 5 Type recipient number or press **abc** to choose it from your contacts.
 - 6 Press **Send**, or SEND key, or the PTT button.
-

5.4.1.2 Sending a Message to Group

Procedure Steps

-
- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **New Message**.
 - 3 Type your message and press **Send**.
 - 4 If needed, select **Group**.
 - 5 Select a group to send the message.
-

5.4.1.3 Sending a Store and Forward Message

Prerequisites:

Your service provider enables the Store and Forward feature.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **New Message**.
 - 3 Press MENU key and select **Message Setup** → **On/Offline users**.
 - 4 Enter your message and press **Send**.
 - 5 If asked for the **Target selection**, select one of the following:
 - **Private** — enter the private number or press **abc** to choose the destination number from the contact list.
 - **Phone** — enter the phone number or press **abc** to choose the destination number from the contact list.
- 

NOTE

Your service provider can enable to send a Store and Forward message to a talkgroup.
- 6 Press **Send**, **Select**, SEND key, or the PTT button.

5.4.1.4 Delivery Report

Delivery Report is an acknowledgment that the radio can request upon sending a message to an individual recipient. You can define what type of Delivery Report your radio requests, or turn on/off this feature.

If the Delivery Report is received shortly after the message was sent, the radio:

- Displays a pop-up with one of the following messages (depending on what Delivery Report was received): **Message Sent**, **Message Delivered**, **Message Read**, or **Message Failed**.
- Saves the Delivery Report in **Outbox** along with a copy of the message.

If the Delivery Report is received after a longer period of time, the radio:

- Saves the Delivery Report in **Outbox** along with a copy of the message.
- If Delivery Report Notifications functionality is configured by your service provider, the radio also:
 - Temporarily saves a Delivery Report message in **Inbox**. The notification disappears after it is read.
 - Displays **New Message** icon.
 - Displays **New Delivery Status** notification screen (if possible).

To read the Delivery Report:

1. Find the message in **Outbox**.
2. Open the message.
3. Press MENU.
4. Select **Delivery Status**.

5.4.1.5 Configuring Delivery Report

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **New Message**.
 - 3 Press MENU key and select **Delivery Report**.
 - 4 Select one of the following:
 - **None** — Radio does not request any delivery report.
 - **Received** — Radio requests reports on your messages that were received.
 - **Consumed** — Radio requests reports on your messages that were read.
 - **Both** — Radio requests reports on your messages that were received and read.
-

5.4.2 Inbox

It contains up to 100 new or old incoming messages.

Table 5-3 Inbox Icons

Icon	Description
	Unread (New) Message
	Read (Old) Message
	Sender Information in Message View — name or number
	Time and Date Stamp in Message View — arrival time and date
	Delivery Status Received — delivery status for Store & Forward messages

Messages sub-menu indicates the number of the messages. If the indication is for example 2/4, it means that two unread and four read messages are in the **Inbox**.

5.4.2.1 Entering the Inbox

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Messages** → **Inbox**.



NOTE

The status (if any) of the list is displayed for a few seconds:

- **No New or Old Messages** — The screen returns to the previous display within a few seconds.

- **Inbox Full** — Select **Ok**.
-

5.4.2.2 Receiving New Message

Procedure Steps

- 1 New message received.

Step result: Your radio displays an animation and plays a *New Mail Received* tone.

- 2 Select one of the following:

- **Read** — opens the entire message.
 - **Back** — dismisses the message. You can access the message later from the **Inbox**.
-

5.4.2.3 Using Submenu in Inbox and Outbox

Procedure Steps

- 1 From the home screen, press MENU key.
-

- 2 Select **Messages** → **Inbox** or **Outbox**.
-

- 3 Highlight the required message and press MENU key.
-

- 4 Select one of the following:

- **Store** — Saves a message as a template. Change the default template name and press **Ok**.
 - **Delete** — Deletes the selected message. Press **Yes** to confirm.
 - **Delete All** — Deletes all the messages in the **Inbox/Outbox**. Press **Yes** to confirm.
 - **Reply** (only for **Inbox**) — Invokes the edit screen with the old message as default text and the message originator as a recipient. After editing, press **Send**, the PTT button, or the SEND key to send.
 - **Resend** (only for **Outbox**) — Invokes the edit screen with previously entered text with the same recipient. After editing, press **Send**, the PTT button, or the SEND key to send.
 - **Forward** — Invokes the edit screen with the old message to send it to a different participant. After editing, press **Send**, the PTT button, or SEND key to send.
 - **Refresh** — Re-orders the message list and displays the new messages.
 - **Delivery Status** (only for **Outbox**) — Shows the date and time of the message when it sent, delivered, read, and expired was not delivered, expired was not read, failed unknown.
-

5.4.2.4 Embedded Number

This feature allows you to call a number from a message or to start a group call with the message sender talkgroup.

5.4.2.5 Storing a Number from a Message

Prerequisites:

Embedded Number feature is enabled by your service provider.

When and where to use:

You can save the sender's or embedded number from the message to a new or existing contact.

Procedure Steps

-
- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **Inbox**.
 - 3 Highlight the required message and select **Read**.
 - 4 Press the PTT button.
 - 5 Radio displays a list of the numbers (including the senders number).
 - 6 Highlight the required number and press **Store**.
 - 7 Highlight required contact and press **View**.
-

**NOTE**

To store a number for a new contact, select **[New Contact]** and fill out the required fields. Press **Done** to save it..

- 8 Select **Edit**.
 - 9 Choose the **Type** of the new number and press **Done**.
-

5.4.2.6 Calling a Number in a Message

Prerequisites:

Embedded Number feature is enabled by your service provider.

When and where to use:

You can return a voice call to the sender of a message or to any number that is embedded in the message text.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Messages** → **Inbox**.
- 3 Highlight the required message and select **Read**.
- 4 Press the PTT button.
- 5 Radio displays a list of the numbers (including the senders number).
- 6 To call, highlight to the required number and press the PTT button or SEND button.
- 7 Select **Ctype** to choose the type of call (**Private**, **Phone**, or **PABX**).
- 8 Press the PTT button or SEND button.

5.4.2.7 Making a Group Call on a Talkgroup of the Message Originator

Prerequisites:

Embedded Number feature is enabled by your service provider.

When and where to use:

You can start a group call with the message originator talkgroup.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Messages** → **Inbox**.
- 3 Highlight the required message and press the PTT button.

5.4.2.8 Immediate Message

When the new immediate message is received, radio plays the New Mail Received tone and displays the content overlapping your previous screen. All immediate messages are stored in the **Inbox**. If the radio is in PIN Lock state, immediate message is displayed after correct PIN is entered.



NOTE

This feature needs to be enabled by your service provider.

5.4.3 Outbox

It stores all sent messages.

Table 5-4 Outbox Icons

Icon	Description
	Delivery in Progress
	Delivery Accomplished
	Delivery Failed

Messages sub-menu indicates the number of the messages. If the indication is for example 2, it means that two messages are in the **Outbox**.

5.4.4 CO Box

It contains all the Call-Out messages. The messages are arranged chronologically into two levels. When the radio is in Call-Out Mode, you can only read the ongoing Call-Out messages.

SEE ALSO

[Call-Out](#)

5.4.5 WAP Box

Each WAP Push message can be loaded immediately or stored as a message in **WAP Box**. Then it can be accessed by pressing **MENU** → **Message** → **WAP Box**. All the WAP Push messages are passed to the browser.

SEE ALSO

[WAP](#)

[WAP Push](#)

5.4.6 Templates

This feature is used to store up to 100 predefined and your message templates. Each of the **Inbox** and **Outbox** message can be stored as a template to save time in typing the same text. Each template name and text can be edited afterwards.

5.4.6.1 Sending a User-Defined Template

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Messages** → **Templates**.

- 3 Highlight the required template name and press **Send**.

- 4 Do one of the following:
 - Enter the number or press **abc** to select the name from your contact list. Press **Send**.
 - Select required talkgroup from the **TalkGroup List**.

5.4.6.2 Setting User-Defined Templates

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Messages** → **Templates**.

- 3 Highlight the required template and press MENU.

- 4 Select one of the following:
 - **View** — Displays template text.
 - **Delete** — Deletes the template.
 - **Edit Text** — Opens edit screen with the template text. Edit the text and press MENU. Select **Save Changes** to save edited template, or **Store** to save the edited template as a new one.
 - **Edit Name** — Opens edit screen with the template name. Press **Ok** to save the template.

5.4.7 Predefined Templates

Predefined message templates are programmed into your radio. You are allowed to perform limited edit operations of the predefined template. You can send it, but you are not able to store the edited template or erase it from the predefined template list.

5.4.7.1 Viewing Predefined Templates

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Messages** → **Predefined**.
 - 3 Highlight the required template and press MENU key.
 - 4 Select **View**.
-

5.4.7.2 Sending Predefined Templates

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **Predefined**.
 - 3 Highlight the required template and press **Send**, the PTT button, or the SEND key.
-



NOTE

You can edit the predefined template before you send it. Press MENU and select **Edit**. Edit screen opens with the template text. You are only allowed to replace the existing text.

5.4.8 Send Status

5.4.8.1 Viewing a Status Message Number

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Messages** → **Send Status**.
 - 3 Press MENU and select **View**.
-

5.4.8.2 Sending a Status Message to a Group

Prerequisites:

Switch to the desired talkgroup, to which you want to send a status message.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Messages** → **Send Status**.
- 3 Do one of the following:
 - Highlight the required status message and press **Select**, the PTT button, or the SEND key.
 - Enter 5 digit status message number and press **Send**.



NOTE

If the radio displays **Status list is empty**, you can enter 5 digit status message and press **SendTo**.

5.4.8.3 Targeted Status

This feature allows you to send the status message to a private number or to user selected talkgroup.



NOTE

Your service provider can disable to send a status message to a private number that is not in the **Contacts**.

5.4.8.4 Sending a Targeted Status Message

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Messages** → **Send Status**.
- 3 Do one of the following:
 - Highlight the required status message and press **Select**, the PTT button, or the SEND key.
 - Enter 5 digit status message number and press **Send**.



NOTE

If the radio displays **Status list is empty**, you can enter 5 digit status message and press **SendTo**.

- 4 Do one of the following:
 - Enter the number or press **abc** to select the name from your contact list. Press **Send**.
 - Select required talkgroup from the **TalkGroup List**.

Result:

The display shows on of the following delivery reports:

- **Status Sent.**
- **Status Failed.**

5.5 Contacts

This sub-menu stores all your contact numbers. Each entry requires the following information:

- **Name** — if you store more than one number to one contact, this entry is required.
- **Type** — each contact must be assigned to one of the following types:

Table 5-5 Contact Types

Contact Icon	Description
	Private Cannot have a speed dial number.
	Mobile
	Home
	Work
	PABX

Table 5-5 Contact Types (cont'd.)

Contact Icon	Description
	Other
	Pickers Indicate more than one number in a contact.

- # (number) — each contacts entry must contain a number.
- **Speed #** — accept the default Speed Dial number or change it.

5.5.1 Creating a Contact

Procedure Steps

- 1 From the home screen, select **Contcs**.
- 2 Select **[New Contact]**.
- 3 Highlight **Name** and press **Change**. Enter the name of your contact and press **Ok**.
- 4 Highlight **Type** and press **Change**. Select the required type of your contact.



NOTE

You can use the Left and Right NAVIGATION keys to select the type of your contact from the **Contact Details** screen.

- 5 Highlight # (number) and press **Change**. Enter the number of your contact and press **Ok**.
- 6 If needed, highlight **Speed #** and press **Change**. Enter the speed dial number (1– 1000) of your contact and press **Ok**.



NOTE

If the entered number exist, the radio displays **Overwrite?** message. Press **Yes** to confirm, or **No** to enter the speed dial number again.

- 7 Press **Done**.

Result:

You have create a contact with one number. To add additional number repeat steps 4–6.

5.5.2 Editing a Contact

Procedure Steps

- 1 From the home screen, press **Contcs**.
 - 2 Highlight the contact you want to edit.
 - 3 Press **MENU**.
 - 4 Press **Edit**.
 - 5 Highlight one of the following entries and press **Change** to edit:
 - **Name**
 - **Type**
 - **# (number)**
 - **Speed #**
 - 6 Press **Done**.
-

5.5.3 Deleting a Number

Procedure Steps

- 1 From the home screen, press **Contcs**.
 - 2 Select a contact you want to edit.
 - 3 Use left or right **NAVIGATION** keys to choose the required number.
 - 4 Press **MENU**.
 - 5 Select **Delete number**.
-



NOTE

If an entry contains only one number, deleting the number deletes the entry.

- 6 Press **Yes**.
-

5.5.4 Deleting a Contact

Procedure Steps

- 1 From the home screen, select **Contcs**.
- 2 Highlight a contact you want to delete.
- 3 Press MENU.
- 4 Select **Delete contact**.
- 5 Select **Yes**.

5.5.5 Checking Capacity

When and where to use:

To see how many numbers are stored in the radio.

Procedure Steps

1 From the home screen, select **Contcs**.

2 Press MENU.

3 Select **Capacity**.

4 Select one of the following:

- **Private**
 - **Phone / PABX**
 - **Contact**
-

5.5.6 Dialing through the Contact List

Procedure Steps

1 From the home screen, press **Contcs**.

2 To highlight the required contact, use up and down NAVIGATION keys or by entering up to 12 characters of the contact name.

3 If the contact has more than one number, use left and right NAVIGATION keys to select the required number.

4 Press the PTT button to initiate a simplex call with a **Private** number. Otherwise use the SEND key to initiate a duplex call.

5.6 Security

This sub-menu stores all your security settings.

5.6.1 PIN Protect

This feature allows you to enable PIN code authentication at the next power on. This code protects your radio against unauthorized use.

If you are unable to unlock the radio, you can only send or receive Emergency Calls and adjust the volume level with the ROTARY KNOB.

SEE ALSO[Unlocking Your Radio](#)[Changing PIN Code](#)

5.6.1.1 Protecting the Radio with a PIN Code

Procedure Steps

- 1 From the home screen, press **MENU** → **Security** → **PIN Protect**.
 - 2 Select **On**.
 - 3 Enter 4-digit PIN code. By default it is 0000 (four zeros).
-

**SUGGESTION**

To increase security, set your own PIN code.

Postrequisites:

Each time you turn on the terminal, PIN code is required.

5.6.1.2 Unblocking Your Radio

Prerequisites:

You blocked your radio by entering incorrect PIN code for three times (by default).

Procedure Steps

- 1 Radio displays **Unit Blocked Enter PUK**.
- 2 Enter 8-digit PUK (Personal Unblocking Key) number.



NOTE

The PUK is an eight-digit master code provided by your service provider.

- 3 Enter the new PIN code twice.
-

5.6.1.3 Changing PIN Code

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Security** → **Change Code**.
 - 3 Radio prompts for the **Old Code**. Enter currently used 4-digit security code (default setting is 0000).
 - 4 If the entered code matches the old code, radio prompts for the new code twice.
-

Result:

Your radio displays **Code Accepted**.

SEE ALSO

[Unlocking Your Radio](#)

[PIN Protect](#)

5.6.2 Keylock Setup

The keypad lock feature allows locking the keypad to prevent accidental pressing of keys. The keypad lock/unlock can be invoked using the menu. By default press MENU, and then left NAVIGATION key.

Your service provider can determine which of the following elements are additionally inoperative while the keypad lock feature is active:

- The PTT button
- Side buttons
- The ROTARY KNOB
- The ON/OFF/END/HOME key

The EMERGENCY button is always operative.

SEE ALSO

[Locking/Unlocking the Keys/Buttons](#)

5.6.2.1 Keypad Lock Notification

When the keypad is locked, your service provider can configure one of the following instructions:

- None — no notification is displayed.
- Notification Only — **Keys Locked** is displayed.
- Notification and Instruction — **Press Menu + Left to lock/unlock keypad** is displayed.

5.6.2.2 Setting Automatic Keylock Delay

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Security** → **Keylock Setup** → **Delay**.

- 3 Use up and down NAVIGATION keys to change the minutes and press **Done**.

5.6.2.3 Setting Keylock on Startup

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Security** → **Keylock Setup** → **Start Locked**.

- 3 Select **On/Off**.

5.6.3 Air Encryption

Air Encryption is a feature that enables encryption of entire communication between the radio and infrastructure, which results in increased security of calls, messages, and data.

If encryption is on and you receive a clear call (unencrypted), the radio plays a sound and displays **Call & Data Not Encrypted**. This feature provides service confidentiality between you and the system.

In the TMO Mode, when Air Encryption is enabled on your radio but cannot be supported due to an infrastructure failure, the following icon appears on the display: .

When encryption is not available in the DMO Mode, the radio displays: .

This menu item allows you only to view air encryption state.

SEE ALSO

[Status Icons](#)

5.6.3.1 Viewing Air Encryption State

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Security** → **AirEncrypt**.
 - 3 Your radio displays:
 - a. **Air Encryption Is Off**.
 - b. **Air Encryption Is On**.
-

5.6.3.2 Air Encryption Key Deletion

Please check with your service provider whether the radio is provided with Air interface encryption keys. You can delete the Air interface encryption keys from the radio by entering the following sequence: ****00##**.



NOTE

- It takes a minute for this feature to delete all the encryption keys from the radio. During this time, do not remove the battery.
- Deletion is performed in idle TMO/DMO or Emergency Operation.



CAUTION

Using this feature will disable the radio, and your service provider will need to reenable the radio.

5.6.4 K Validity

K (Key) is a secret key the infrastructure uses to authenticate the radio in the system. It is part of the authentication that provides service confidentiality between your radio and the system.

5.6.4.1 Verifying K Validity

Procedure Steps

- 1 From the home screen, press MENU key.

 - 2 Select **Security** → **K Validity**.

 - 3 Your radio displays:
 - **K is Valid** — the infrastructure can authenticate your radio.
 - **K is Invalid** — the infrastructure is unable to authenticate your radio. Please call your service provider to restore the key to your radio.
-

5.6.5 TMSCK Validity

SCK (Static Cipher Key) is a secret key the infrastructure uses to encrypt call and data in TMO Mode. Air interface encryption provides service confidentiality between your radio and the system. Your radio is provided with a set of SCKs.

5.6.5.1 Verifying TMSCK Validity

Procedure Steps

- 1 From the home screen, press MENU key.

 - 2 Select **Security** → **TMSCK Validity**.

 - 3 Your radio displays:
 - **TMSCK is Valid** — your radio can work encrypted in TMO Mode.
 - **TMSCK is Invalid** — your radio cannot work encrypted in TMO Mode. Please contact your service provider to restore SCKs to your radio.
-

5.6.6 DMSCK Validity

This feature is used to provide the service confidentiality for your calls and data services in the DMO Mode.

5.6.6.1 Verifying DMSCK Validity

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Security** → **DMSCK Validity**.

- 3 Your radio displays:
 - **DMSCK is Valid** — your radio can work encrypted in DMO Mode.
 - **DMSCK is Invalid** — your radio cannot work encrypted in DMO Mode. Please contact your service provider to restore SCKs to your radio.

5.6.7 DMO SCK

Air interface encryption provides service confidentiality between your radio operating in Direct Mode and another radio or a group of radios operating in Direct Mode. This feature allows you to enhance security.



NOTE

This feature needs to be enabled by your service provider.

5.6.7.1 Changing DMO SCK

Procedure Steps

- 1 From the home screen, press MENU key.

 - 2 Select **Security** → **DMO SCK**.

 - 3 Press **Next**.

 - 4 Radio displays **Change to version** .

 - 5 Select one of the following:
 - **Yes** — to change the key. Your radio displays **Key version changed**.
 - **No** — to leave the key. Your radio displays **Code Not Changed**.
-

5.6.8 Covert Mode

This feature enables you to completely shut down all visible and audible alerts and notifications making the radio unnoticeable even in a silent and dark environment.

When your radio is in the Covert Mode, you cannot enter the following menu items of the **Setup** menu.

- **Vibrate**.
- **Set Volume**
- **Tones**
- **Backlight** (in **Display** menu item)

When the Covert Mode is turned on:

- All tones are set to **Off** (corresponding to **All Tones** menu entry).
- Group audio is set to **Speaker Control** (corresponding to **Audio Toggle** menu entry).
- The private speaker is set to **Off** (this setting causes all the calls are routed through the earpiece).
- Backlight is set to **Disabled** (corresponding to **Backlight** menu entry).
- The LED indicator switches off.

The radio powers up in the mode set before turning off. Thus if the Covert Mode was set before turning off, the radio turns on in the Covert Mode .

When the Covert Mode is turned off all the changed settings are reverted to the previous state.

This feature can be used as the One-Touch Button.

5.6.8.1 Activating Covert Mode

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Security** → **Covert Mode**.

- 3 Select one of the following:
 - **On** — all tones are set to off, and the backlight and the LED are disabled immediately. The group audio is routed to the earpiece. The radio displays **Covert Mode On**.
 - **Off** — all settings for tones, backlight and audio are restored. The radio displays **Covert Mode Off**.

5.6.8.2 Setting to Vibrate in Covert Mode

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Security** → **Covert Mode** → **Vibrate**.

- 3 Select one of the following:
 - **On** — To restore all vibrations.
 - **Off** — To disable all vibrations.

5.7 Man Down

This feature monitors the state in which the radio is. The radio alerts you when:

- its tilt exceeds a predefined angle value.
- it remains static for a predefined time.

If you do not change the state of the radio or press the PTT, the radio switches to the Emergency Mode.

For the easier localization of the radio, visual and audible indications are started until they are deactivated. If the Emergency Hot Microphone is on, the additional audio indication is not played.

To exit Man Down, exit the Emergency Mode by pressing and holding **Exit** or press PTT.

5.7.1 Setting Man Down

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Man Down**.
 - 3 Select one of the following:
 - **On** — Activates the feature.
 - **Off** — Deactivates the feature.
-

5.8 Setup

This sub-menu allows you to change your radio configuration.

5.8.1 Vibrate

This sub-menu allows you to determine if your radio vibrates, or rings, or both vibrates and rings when receiving a call.

5.8.1.1 Setting Default Vibrate

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Vibrate**.

- 3 Select one of the following:
 - **Vibe then Ring**
 - **Vibe Only**
 - **Ring Only**

5.8.1.2 Setting Detail Vibrate

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Vibrate** → **Details...**

- 3 Select one of the following:
 - **Duplex Calls** — Sets the vibrate settings to Phone, PABX, and Duplex Private calls.
 - **Simplex Calls** — Sets the vibrate settings to Simplex Private Calls.
 - **Group Call** — Sets the vibrate settings to Group Calls.
 - **Messages** — Sets the vibrate settings to status messages and text messages.

- 4 Select the required setting, and press **Select**.



NOTE

If you choose **Duplex Calls**, **Simplex Calls** or **Messages**, the settings available are **Vibe then Ring** (for messages it is **Vibe & Ring**), **Vibe Only** or **Ring Only**. If you choose **Group Call**, the settings available are **Vibe On** or **Vibe Off** only.

5.8.2 Ring Style

This sub-menu allows you to set the incoming call ring style.

5.8.2.1 Setting Ring Style

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Ring Style**.
- 3 Select one of the following:
 - **Duplex** — To set the new ring style to all duplex calls.
 - **Simplex** — To set the new ring style to all simplex calls.



NOTE

Upon entry into this sub-menu, the display shows the current ring style used.

- 4 Scroll to the desired style and press **Select**.



NOTE

New ring style is played immediately for a few seconds. If necessary, adjust the volume level.

5.8.3 Set Volume

This menu item allows you to adjust the **Simplex**, **Duplex**, **Earpiece**, **Speaker**, and **Keypad** tone volume.

SEE ALSO[Volume Adjustment Mode](#)

5.8.3.1 Setting Volume

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Set Volume**.
- 3 Select one of the following:
 - **Duplex Vol** — sets the volume level for duplex ringtones.
 - **Simplex Vol** — sets the volume level for simplex ringtones.
 - **Earpiece Vol** — sets the volume level for the earpiece.
 - **Speaker Vol** — sets the volume level for the speaker.
 - **Keypad Vol** — sets the volume level for keypad tones.

**NOTE**

If the display shows only one option **Volume**, you can adjust all of the above settings at once. You have the option to change the settings individually when the **Volume Adj. Mode** is set to **Individual**.

- 4 Press right or left NAVIGATION key to change the value.

**NOTE**

When the battery level is low it is not recommended to attach the 4 Ohm speaker to the radio as it can cause reset or shutdown of the radio.

SEE ALSO[Setting Volume Adjustment Mode](#)

5.8.4 Language

This sub-menu allows you to change the language of the radio.

5.8.4.1 Setting Language

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Language**.
 - 3 Select desired language.
-

5.8.5 Data Setup

This menu item allows you to set up your radio to transmit and receive data from the external device.

To connect your radio accessory connector to the external device, use cable FKN4897. The external device must run an application complying with the TETRA standards.



NOTE

- Data services are available only in TMO Mode.
- Data services are blocked in TXI Mode.
- When set to **Voice Only**, the built in data modem is disabled to conserve battery power.

5.8.5.1 Setting Data Function

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Data Setup**.
 - 3 Select one of the following:
 - **Voice Only** — Your radio receives and transmits voice calls only.
 - **Data Only** — Your radio acts as a modem. It rejects incoming and outgoing voice calls (except for Emergency Calls), status and text messages.
 - **Voice & Data** — Your radio acts as a modem but voice calls have priority over data calls and can interrupt them.
-

5.8.6 Audio

This menu item allows you to adjust your radio audio settings.

5.8.6.1 Audio Profile

When there is a need of different audio quality and adaptive audio parameters, you can modify them accordingly to the working environment. An audio profile adjusts the audio parameters of the radio to fit its current operating environment. There are up to five profiles available.

Your service provider can set up two profiles that use Extended Transmit Automatic Gain Control feature:

- **Extended General Use 1** — designed to be used in the normal user environment (noisy street or indoor).
- **Extended General Use 2** — designed to be used in harsh environment with the ability to work on a quiet street.

This feature gives you the ability to use only one profile to provide a good sound quality in various conditions.

5.8.6.2 Setting Audio Profile

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Audio** → **Audio Profile**.
 - 3 Select required profile.
-

5.8.6.3 Howling Suppression

Howling Suppression is a mode of the operation that eliminates howling effect.

5.8.6.4 Setting Howling Suppression

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Audio** → **Howling Suppr.**
 - 3 Select required setting.
-



NOTE

On powering on, the Howling Suppression is disabled.

5.8.6.5 Audio Toggle

You can control audio routing (speaker/earpiece) for any private or group call through the dedicated SPEAKER CONTROL key. You can also define through the menu to have all group calls in high audio or controlled by the SPEAKER CONTROL key.

5.8.6.6 Setting Audio Toggle

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Audio** → **Audio Toggle**.
 - 3 Select one of the following:
 - a. **Always Loud** — The audio sound comes from the speaker (high audio only).SPEAKER CONTROL key is disabled.
 - b. **Spkr Cntrl** — The audio goes through the earpiece or the speaker. You can switch between low and high audio by pressing SPEAKER CONTROL key.
-

5.8.6.7 Volume Adjustment Mode

You can set the volume to **Individual** or **Common**. When it is set to **Individual**, the volume level for **Voice**, **Duplex**, **Simplex**, **Earpiece**, **Speaker** and **Keypad** can be set per user preferences. When set to **Common**, the audio have one setting for all items.

SEE ALSO

[Set Volume](#)

5.8.6.8 Setting Volume Adjustment Mode

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Audio** → **Volume Adj. Mode**.
 - 3 Select one of the following:
 - **Individual** — You can set **Duplex**, **Simplex**, **Earpiece**, **Speaker** and **Keypad** per your preferences in **MENU** → **Setup** → **Set Volume**.
 - **Common** — You can set one value for all the items in **MENU** → **Setup** → **Set Volume**.
-

SEE ALSO

[Setting Volume](#)

5.8.7 Tones

This menu item allows you to activate/deactivate your radio tones.

5.8.7.1 Keypad Tone

You can activate/deactivate keypad tone at every key press.

5.8.7.2 Setting Keypad Tone

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Tones** → **Keypad Tone**.

- 3 Select one of the following:
 - **On** — Activates keypad tone.
 - **Off** — Deactivate keypad tone.

5.8.7.3 All Tones

You can activate/deactivate all tones.

5.8.7.4 Setting All Tones

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Tones** → **All Tones**.

- 3 Select one of the following:
 - a. **On** — Activates all the tones.
 - b. **Off** — Deactivates all the tones.

5.8.7.5 Talk Permit

You can set a different tone upon pressing the PTT button.

5.8.7.6 Setting Talk Permit

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Tones** → **Talk Permit**.
 - 3 Select one of the following:
 - **No Tone** — No tone heard upon pressing the PTT button.
 - **Short Tone** — Short tone heard upon pressing the PTT button.
 - **Normal Tone** — Factory-default tone heard upon pressing the PTT button.
-

5.8.7.7 Clear to Send

You can activate/deactivate tone for the transmitting radio that the receiving radio is ready to accept the transmission.

5.8.7.8 Setting Clear to Send

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Tones** → **Clear to send**.
 - 3 Select one of the following:
 - **Tone On** — Activate clear to send tone.
 - **Tone Off** — Deactivates clear to send tone.
-

5.8.7.9 Periodic Alert

You can activate/deactivate periodic tone indication for the missed calls, the unread messages, and low battery level. For each notification, your radio generates an unread message tone with the amber LED color indication.

5.8.7.10 Setting Periodic Alert

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Tones** → **Periodic Alert**.
- 3 Select one of the following:
 - **Alert** — Activates/deactivates periodic tone.
 - **Period** — Indicates the time between each periodic tone.

5.8.7.11 D-PTT Tones

This menu item contains the settings for the Double PTT feature.

The Double PTT feature allows you to send a tone pattern (single, double, or triple) when the radio is in idle or the Group Call mode by pressing the PTT button twice.

After the D-PTT tone is played, the user can press and hold the PTT button once again to get the permission to talk. Otherwise, if the user presses the PTT button while the D-PTT tone is played, it is ignored.

After the D-PTT tone is sent keeping the PTT button pressed, it results in permission to talk. The D-PTT tone is not audible on a sending radio.



NOTE

This feature needs to be enabled by your service provider.

5.8.7.12 Setting D-PTT Tones

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Tones** → **D-PTT Tones**.
- 3 Select one of the following:
 - **D-PTT Mode** — Activates/deactivates D-PTT tone.
 - **Tone Style** — Indicates how many times the D-PTT tone is played.

5.8.8 Display

This menu item allows you to adjust your radio display settings.

SEE ALSO

[Display](#)

[Setting Time and Date on the Display](#)

5.8.8.1 Setting Vertical Flip

When and where to use:

The feature is useful for a user who has to wear the radio on shoulder, belt, or lapel and at the same time wishes to read the display upside down.

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Display** → **Flip Display**.

- 3 Select one of the following:
 - **On** — To activate this feature.
 - **Off** — To deactivate this feature.

5.8.8.2 Setting Text Size

When and where to use:

This feature enlarge the text on the display so you can see the interface in the environment with the low visibility.

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Display** → **Text Size**.

- 3 Select one of the following:
 - **Standard** — Default size of the text.
 - **Zoom** — Larger size of the text. Keep in mind that less text can be displayed.
 - **Extra Zoom** — The largest size of text.

5.8.8.3 Setting Screen Saver

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Display** → **Screen Saver**.

- 3 Select one of the following:
 - **Activate** — To activate/deactivate this feature.
 - **Text** — To set the text on the screen saver when this feature is activated.

5.8.8.4 Setting Backlight

Use this menu item to adjust Backlight intensity to your needs and environmental conditions.

When and where to use:

To save the battery power.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Display** → **Backlight**.
- 3 Select one of the following:
 - **Auto** — Backlight is triggered by turning on the radio, by pressing any key on device or on the accessory that is connected to it. Also charging or getting signal from the services like: Call-Out message, RUA request, DGNA and TX timeout during priority call are going to turn on the backlight.
 - **Semi Auto** — Backlight is turning on when you are switching on the radio, pressing assigned button to the backlight feature, or charging.
 - **Disabled** — Backlight feature is disabled. Your display is always dimmed.
 - **On** — Backlight is always on.



NOTE

Setting the backlight intensity level by pressing the BACKLIGHT key changes the LED, keypad backlight, and EMERGENCY button backlight intensity.

5.8.8.5 Setting Wallpaper

When and where to use:

To change the look of the idle screen.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Display** → **Wallpaper**.
 - 3 Select one of the following:
 - **On** — To activate this feature.
 - **Off** — To deactivate this feature.
-

5.8.8.6 Setting Contrast

When and where to use:

This feature sets the contract of the display to enhanced visibility of the interface.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Display** → **Contrast**.
- 3 Use left and right NAVIGATION key to change the value.
- 4 Press **Ok**.

5.8.9 Time and Date

This sub-menu controls the displayed time and date on the home screen.



NOTE

If the Home Display Text Message feature is enabled, the time and date cannot be displayed.



NOTE

Infrastructure synchronizes the time and date. When not within the infrastructure signal range you can set the values manually.

5.8.9.1 Setting Time and Date on the Display

Procedure Steps

- 1 From the home screen, press MENU key.

 - 2 Select **Setup** → **Time & Date** → **Display**.

 - 3 Select one of the following:
 - **Time & Date** — Your radio displays time and date.
 - **Time Only** — Your radio displays time only. **Format Date** sub-menu is disabled.
 - **Date Only** — Your radio displays date only. **Format Time** sub-menu is disabled.
 - **Off** — Your radio does not display time nor date. **Format** menu is disabled.
-

SEE ALSO

[Display](#)

[Display](#)

5.8.9.2 Setting Time Format

Prerequisites:

If MENU → Setup → Time & Date → Display is set to **Time & Date** or **Time Only**.

Procedure Steps

- 1 From the home screen, press MENU key.

 - 2 Select **Setup** → **Time & Date** → **Format** → **Format Time**.

 - 3 Select one of the following:
 - **12-Hour** — Displays the time with **am** (before noon) or **pm** (after noon) indication.
 - **24-Hour**.
-

5.8.9.3 Setting Time Manually

When and where to use:

If the time cannot update automatically through the infrastructure.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Time & Date** → **Set** → **Set Time**.
 - 3 Enter current time using NAVIGATION keys.
 - 4 Press **Done**.
-

5.8.9.4 Setting Date Format

Prerequisites:

If MENU → Setup → Time & Date → Display is set to **Time & Date** or **Date Only**.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Time & Date** → **Format** → **Format Date**.
 - 3 Select (D — day, M — month, Y — year):
 - **DD/MM/YY**
 - **MM/DD/YY**
 - **DD-MON-YY**
 - **YY/MM/DD**
-

5.8.9.5 Setting Date Manually

When and where to use:

If the time cannot update automatically through the infrastructure.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Time & Date** → **Set** → **Set Date**.
 - 3 Enter current time using NAVIGATION keys.
 - 4 Press **Done**.
-

5.8.9.6 Setting Time Offset

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Time & Date** → **Set** → **Time Offset**.
 - 3 Enter time offset using NAVIGATION keys.
-



NOTE

You can adjust the offset value, with 15 minute steps, up to 14 hours ahead or behind.

- 4 Press **Done**.
-

5.8.9.7 Setting Automatic Update for the Time and Date

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Time & Date** → **System Update**.
 - 3 Select one of the following:
 - **Off** — All the infrastructure informations are ignored. The radio uses internal time and offset.
 - **Time Only** — Time displayed is calculated from the offset programmed by your service provider added or subtracted from the infrastructure time.
 - **Time & Offset** — Time and offset are updated after receiving from the infrastructure.
-

5.8.10 Energy Economy

Energy Economy (EE) is a mode of operation to save battery life. Your radio does not monitor all downlink time slots of the Main Control Channel. If the radio is in the charger, **Energy Economy** mode is not needed.

5.8.10.1 Enabling Energy Economy

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Energy Economy** → **EE Selection**.

- 3 Select one of the following:
 - **On** — Activates Energy Economy feature.
 - **Off** — Deactivates Energy Economy feature.

5.8.10.2 Viewing Energy Economy Status

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Energy Economy** → **EE Status**.

- 3 The Energy Economy status is displayed as:
 - **Energy Economy Is Currently Supported By System**
 - **Energy Economy Is Currently Not Supported By System**

5.8.11 Transmission Power Class

Transmission Power feature enables your radio to choose whether to transmit with Class 3L or Class 4. The signal strength icon indicates when the radio uses this feature.

5.8.11.1 Selecting RF Power

When and where to use:

If you are entering the area that requires higher signal strength.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **RF Power**.
- 3 Select one of the following:
 - **Hi RF Power** — Activates this feature.
 - **Normal RF Pwr** — Deactivates this feature.



NOTE

- Changing RF Power Class to **Normal RF Pwr** during calls may result in dropping the call. The power level may be not sufficient to sustain the transmission.
 - Battery consumption is higher when **Hi RF Power** is selected.
-

5.8.12 Accry (Accessory) Setup

You can choose which of the accessory is connected to the radio. It automatically applies the audio mode and option buttons configured by your service provider.

5.8.12.1 Selecting Accessory

When and where to use:

To use your radio predefined audio modes for the connected accessory.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Accry Setup**.
 - 3 Select one of the following:
 - **CORE RSM/PHF** — select an accessory from the list of the CORE accessories.
 - **CORE Earpiece** — select an earpiece from the list of the CORE accessories.
 - **Other RSM/PHF** — select an accessory from the list of the non-Motorola accessories.
 - **Other Earpiece** — select an earpiece from the list of the non-Motorola accessories.
 - **RSM Earpiece** — specify if the accessory is connected to the RSM.
-

5.8.13 Book On

This menu item allows you to edit RUA/RUI feature settings to automatically accept or reject book on requests.

SEE ALSO[RUA/RUI](#)[RUI](#)

5.8.13.1 Editing Book On Settings

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Book on Setup**.

- 3 Select one of the following:
 - **Book on Accept** — Radio accepts all the book on requests.
 - **Book on Reject** — Radio rejects all the book on requests without any notification.

5.8.14 Rotary Knob

This menu item allows you to set all the related functionality of the ROTARY KNOB.

5.8.14.1 Setting Rotary Knob Mode

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **Setup** → **Rotary Knob** → **Rotary Mode**.

- 3 Select one of the following:
 - **Dual** — Both modes are available. Turn the ROTARY KNOB to adjust the volume or press and then turn to switch to different talkgroup.
 - **Volume** — The knob is used only as a volume control. Turn it clockwise to increase the audio volume level.
 - **Scroll** — The knob is used only to change the talkgroup, or in the menu to scroll menu items.



NOTE

If you choose **Scroll** and the display shows:

- **Scroll Selected** — To adjust volume level go to the main menu, select **Setup** → **Set Volume**.
 - **Function Keys are set to Adjust Volume** — You can use your programmable SIDE buttons to adjust volume.
-

5.8.14.2 Setting Rotary Lock

Procedure Steps

- 1 From the home screen, press MENU key.

 - 2 Select **Setup** → **Rotary Knob** → **Rotary Lock**.

 - 3 Select one of the following:
 - **Locked** — Locks ROTARY KNOB, you can unlock it by selecting **Unlocked** or by pressing and holding ROTARY KNOB.
 - **Unlocked** — Unlocks the ROTARY KNOB.
 - **Disabled** — Locking function is unavailable. Your ROTARY KNOB is unlocked all the time.
-

5.8.14.3 Setting In Keypad Lock

When and where to use:

To set behavior of the rotary knob when the keypad is locked.

Procedure Steps

-
- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Rotary Knob** → **In Keypad Lock**.
 - 3 Select one of the following:
 - **Lock None** — Scrolling and volume setting functionality is available.
 - **Lock Volume** — ROTARY KNOB can be only used for scrolling.
 - **Lock Scroll** — ROTARY KNOB can be only used for setting the volume.
 - **Lock Both** — Scrolling and volume setting functionality is unavailable.
-

5.8.14.4 Setting Rotary Knob Wrap Around

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Rotary Knob** → **Wrap Around**.
- 3 Select one of the following:
 - **On** — Scrolling through the talkgroup list is looped or is moved to the next folder.
 - **Off** — Scrolling through the talkgroup list stops after reaching first or last talkgroup in the current selected folder.



NOTE

Only when **Wrap Around** is set to **On** and the **Scroll Range** is set to **Scroll To Next**, you are able to scroll through all the talkgroups and folders.

5.8.14.5 Setting Rotary Knob Scroll Range

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Rotary Knob** → **Scroll Range**.
- 3 Select one of the following:
 - **Stay In Range** — Scrolling through the talkgroups in the current folder only.
 - **Scroll To Next** — Scrolling through all the talkgroups and folders.



NOTE

Only when **Wrap Around** is set to **On** and the **Scroll Range** is set to **Scroll To Next**, you are able to scroll through all the talkgroups and folders.

5.8.14.6 Setting Rotary Knob Talkgroup Selection

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Setup** → **Rotary Knob** → **Confirm TG Sel.**.
 - 3 Select one of the following:
 - **On** — You need to confirm the talkgroup selection by pressing **Select** or pressing the PTT button to immediately start a call on a new talkgroup.
 - **Off** — Attaches to the selected talkgroup without any additional prompt
-

5.8.14.7 Setting Rotary Knob Function Keys

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Setup** → **Rotary Knob** → **Function Keys**.
- 3 Select one of the following:
 - **Auto** — Sets the SIDE buttons according to the **Rotary Mode**.



NOTE

If the **Rotary Mode** is set to:

- **Dual or Volume** — Display shows **Auto Selected (OTB)**, volume can be set only through ROTARY KNOB.
 - **Scroll** — Display shows **Auto Selected (Volume)**, volume can be set only through SIDE buttons.
 - **Volume Adjust.** — Sets the SIDE buttons to adjust volume level.
 - **OTB Feature** — Sets the SIDE buttons to the predefined One-Touch Button features.
-

5.9 Group Setup

This sub-menu allows you to set the scanning and my groups folder.

5.9.1 Scan

This menu item allows you to activate/deactivate scanning, view the active scan list, and edit the scan lists. This feature is available only for the TMO Mode. Your radio joins any group call as long as this group is defined in the scan list and scan is turned on.

SEE ALSO

[Activating Talkgroup Scanning](#)

5.9.1.1 Activating Talkgroup Scanning

When and where to use:

If you want to monitor any TMO Group Call in the defined talkgroup list.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Scanning**.
- 3 Select **Select List** and then a list name.
Step result: Your radio displays list name **Selected**.
- 4 Select **Scanning** → **On**.

Result:

Your radio is scanning on the predefined scan list.

SEE ALSO

[Scan](#)

5.9.1.2 Setting Talkgroups in the Active Scan List

When and where to use:

If you want to edit talkgroups in the active scan list.

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Active List**.



NOTE

If **Scanning is Off** is displayed, go to **More . . .** → **Group Setup** → **Scan** → **Scanning** → **On** to enable scanning.

- 3 Select **View** and highlight the required talkgroup.
 - 4 Press MENU.
 - 5 Select one of the following:
 - **Delete** — Erases this group from the active scan list.
 - **Priority** and select new priority to **Low**, **Medium** or **High**.
-

5.9.1.3 Setting Scan Lists

When and where to use:

If you want to set up any scan list.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **More . . .** → **Group Setup** → **Scan** → **Scan Lists**.
 - 3 Highlight required scan list and press MENU to see additional settings:
 - **Rename** — Enter new name for that scan list.
 - **Capacity** — Displays the number of assigned and unassigned talkgroups for the scan list.
 - **Clear** — Deletes all the talkgroup assigned to that scan list.
 - **Add Group** — Adds a talkgroup to the scan list. Select one talkgroup from your talkgroup folders and assign appropriate priority.
 - **Edit** — Changes the priority of the required talkgroup or deletes it.
-

5.9.1.4 Editing Scan Lists

Procedure Steps

- 1 From the home screen, press **MENU** → **More . . .** → **Group Setup** → **Scan** → **Scan Lists**
- 2 Highlight a required scan list name.
- 3 Select one of the following:
 - **Rename** — Renames the talkgroup.
 - **Capacity** — Checks the number of the talkgroups.
 - **Clear** — Removes all talkgroups from that list.
 - **Add Group** — Adds new talkgroup.
 - **Edit** — Changes the priority of the talkgroup or delete it.



SUGGESTION

To delete a talkgroup from the scan list, select **Edit** and press MENU.

5.9.2 My Groups

This sub-menu allows you to select/edit your favorite group list.

5.9.2.1 Adding Favorite Folder

Procedure Steps

- 1 From the home screen, press MENU key.
-

- 2 Select **More . . . → Group Setup → My Groups**.
 - 3 Select **[New Folder]**.
 - 4 Enter the name and select **Ok**.
-

5.9.2.2 Adding a Talkgroup to a Favorite Folder

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **More . . . → Group Setup → My Groups**.
 - 3 Select **<FolderName>**.
 - 4 Select **[New Group]**.
 - 5 Select the required talkgroup by Folder or by alphabetic search.
-

5.9.2.3 Editing My Folder List

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . . → Group Setup → My Groups**.
- 3 Highlight required favorite folder.
- 4 Press MENU.
- 5 Select one of the following:
 - **Rename Folder** — Edits the name of the folder. Enter new folder name and press **Ok**.
 - **Delete Folder** — Deletes selected folder. Press **Yes**.



NOTE

You cannot delete the last favorite folder.

5.9.2.4 Deleting a Talkgroup from the Favorite Folder

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **More . . .** → **Group Setup** → **My Groups**.

- 3 Select required favorite folder.

- 4 To delete one talkgroup, highlight it and select **Delete**.



NOTE

To delete all the talkgroups from the folder, press MENU and select **Delete All**.

5.10 My Info

This sub-menu allows you to view your own private, phone, and radio info.

5.10.1 Viewing/Modifying Personal Information

Procedure Steps

1 From the home screen, press MENU key.

2 Select **More . . .** → **My Info**.

3 Select one of the following:

- **My Private Num** — displays your radio private number.
- **My Phone Num** — displays your radio phone number.



NOTE

To modify the displayed phone number, select **Edit**. Type the number and press **Ok**.

- **Radio Info** — displays radio information: manufacturer, product type, ISSI, TEI, Serial Number, and OPTA.



NOTE

OPTA information is optional.

5.11 Recent Calls

You can view the history of all calls:

- **Dialed** — calls you initiated.
- **Received** — calls you answered.
- **Missed** — calls you received but not answered or rejected.

Each list of calls may contain up to 50 numbers, the most recent call being at the top of the list. If the number of a recent call is stored in the contact list, the name associated with the number appears in the recent calls list. A number dialed more than once, appears only once in the list.

5.11.1 Viewing Recent Calls

Procedure Steps

1 From the home screen, press MENU key.

2 Select **More . . .** → **Recent Calls**.

3 Select one of the following:

- **Dialed**
- **Received**
- **Missed**

4 Select **View** on the required call.

**SUGGESTION**

Press down NAVIGATION key to bypass first two steps.

**NOTE**

Call time information is only available if the time and date are set in the radio. Call duration is not available in the missed calls list.

5.11.2 Calling from Recent Calls

Procedure Steps

1 From the home screen, press MENU key.

2 Select **More . . . → Recent Calls**.

3 Select one of the following:

- **Dialed** (from the home screen press SEND key to access **Dialed Calls** list)
- **Received**
- **Missed**

**NOTE**

From the home screen press down NAVIGATION key, to access **Recent Calls** menu item.

4 Highlight the required call and press the PTT button for private calls or press the SEND key to make a phone call.

**NOTE**

Phone calls are only available in TMO Mode.

5.11.3 Storing Recent Calls to Contacts

Procedure Steps

1 From the home screen, press MENU key.

2 Select **More . . . → Recent Calls**.

3 Select **Dialed**, **Received** or **Missed**.

4 Press **Store**.

**NOTE**

If **Store** is not assigned to the left SOFT key, the number is already stored in your contact list.

5 To store the number as a new entry, select **[New Contact]**. Or, to store the number to an existing entry, select the entry, and press **View** then select **Edit**.

6 With the contact type field highlighted, scroll left or right to display the contact type you want to assign the number.

7 Select **Done**.

5.11.4 Deleting Recent Calls

Procedure Steps

1 From the home screen, press MENU key.

2 Select **More . . . → Recent Calls**.

3 Select **Dialed**, **Received** or **Missed**.

4 Press MENU on the required call.

5 Select **Delete**.

**NOTE**

To erase all the calls, select **Delete All**.

5.12 RUI

This menu item allows you to log in/out to the radio.

SEE ALSO[RUA/RUI](#)[Book On](#)

5.12.1 Logging On

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **More . . .** → **RUI** → **Log on**.

- 3 Highlight:
 - **User ID** and press **Select** to enter **User ID List**. If you are a new user on this radio, select [**New User ID**] and enter your user ID. Otherwise select your user ID from the list.
 - Second line and press **Edit**, to enter user ID and press **Ok**.

- 4 Select **User PIN**, type your credentials, and press **Ok**.

- 5 Logging screen is displayed.

5.12.2 Logging Off

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **More . . .** → **RUI** → **Log off**.

- 3 Press **Accept**.

5.13 Networks

This menu item allows you to switch between the radio operation modes.

SEE ALSO[Entering TMO / DMO Mode](#)[Selecting Network Operation Mode](#)

5.13.1 Selecting Your Network

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **More . . .** → **Networks** → **Networks Sel** → **Home Only**.

- 3 Your radio registers to the first network on the allowed network list.

5.13.2 Using the Select Net Registration

When and where to use:

Use this feature to migrate to another predefined network, when you are out of the range of your network and your radio displays the **No Service** message.

Procedure Steps

- 1 From the home screen, press MENU key.

- 2 Select **More . . .** → **Networks** → **Networks Sel** → **Select Net**.

- 3 Select the required network from the list.

Result:

Your radio registers to the selected network.

5.13.3 Using the Foreign Network Registration

When and where to use:

Use this feature to migrate to another predefined network, when you are out of the range of your network and your radio displays the **No Service** message.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **More . . .** → **Networks** → **Networks Sel** → **Foreign Net**.
-

5.13.4 Using Any Network

When and where to use:

Your radio has lost its home network coverage and can register to any network. Only clear authentication is supported on any network.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **More . . .** → **Networks** → **Networks Sel** → **Any Network**.
 - 3 Your radio selects and registers to the network automatically from the predefined list.
-

5.13.5 Using the Migrate To Registration

When and where to use:

Use this feature to migrate to another predefined network, when you are out of the range of your network and your radio displays the **No Service** message.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **More . . .** → **Networks** → **Networks Sel** and choose one of the following option:
 - **Migrate To** — Selects the required network form the list. To view the network ID press MENU key then press Select.
 - **Auto** — Your radio automatically attaches to the predefined network.
-

5.13.6 Selecting Network Operation Mode

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Networks**.
- 3 Select one of the following:
 - **Trunked Mode** — Switches to the mode using infrastructure.
 - **Direct Mode** — Switches to the mode without using infrastructure.
 - **Repeater Mode** — Switches to the Repeater Mode.
 - **TXI Mode** — Select **Activate** to stop sending any radio transmission.



NOTE

If the radio is in **TXI Mode**, it is not possible to switch from **Direct Mode** to **Trunked Mode** or **Repeater Mode**.

SEE ALSO

[Networks](#)

[Entering TMO / DMO Mode](#)

5.14 Location

See the GPS Location Service for more information.

SEE ALSO[GPS Location Service](#)

5.14.1 Viewing Your Position

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Location** → **Position**.
- 3 Scroll to view the results about the last time your location was calculated.

**NOTE**

To refresh your position:

- Select **Position** — the radio refreshes its position automatically
 - Press **Refresh**
-

5.14.2 Changing GPS Accuracy

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **More . . .** → **Location** → **Accuracy**.
- 3 Select one of the following:
 - **Medium** (default) — Power consumption optimization is combined with less position accuracy.
 - **High** — Better position accuracy is combined with less power consumption optimization.

**NOTE**

If connected to an external charging device, the radio automatically enters the **High** mode.

5.15 Packet Data

The Packet Data (PD) Service allows you to transfer data in a TETRA system using the Internet Protocol (IP).

**NOTE**

To transfer data from a standard computer over the air, connect the computer via the data cable FKN4897 with your radio. Your service provider has to setup additional applications on your computer.

If set up by your service provider it is possible to accelerate the transmission by using the Multi-Slot Packet Data (MSPD) Service.

5.15.1 Viewing Data Statistics

Procedure Steps

- 1 From the home screen, press MENU key.
-

- 2 Select **More . . .** → **Packet Data**.

**NOTE**

Data services are only available in TMO Mode. The data option must be set to **Voice & Data** or **Data Only**.

- 3 Select one of the following:

- **Sent Data** — the number of KBs **Sent** and **Throughput** since current Packet Data activation is displayed.
- **Received Data** — the number of KBs **Sent** and **Throughput** since current Packet Data activation is displayed.
- **Bandwidth** — active data session percentage is shown.
- **Failed Transfer** — the percentage of failed sent/received packets.

**NOTE**

N.A. — standby packet data session.

5.15.2 Viewing Encryption Status

Procedure Steps

- 1 From the home screen, press MENU key.
-

- 2 Select **More . . .** → **Packet Data** → **Encryption**.
-

- 3 The encryption state of the ingoing packet data session is displayed:

- **Packet Data Channel Clear**
 - **Packet Data Channel Encrypted**
 - **EncryptionN/A** (clear)
-

6 Features

6.1 Private Call

The Private Call, also called point-to-point, or individual call, enables calling between two individuals. No other radio can hear the conversation. This call type can be carried out in two ways:

- Duplex call (if the system allows), in TMO Mode. Both parties can speak at the same time.
- Simplex call, in TMO or DMO Mode. Only one party can speak at a time.

When a DMO Private Call takes place, radios not involved in this call receive the channel busy indication. The radios are identified using its radio numbers.

6.1.1 Making a Private Call

Prerequisites:

Direct Private Number Dialing is assigned to a right NAVIGATION key.

Procedure Steps

-
- 1 From the home screen, press and hold right NAVIGATION key and enter the number.
 - 2 If **Private** is not the first type of call presented, press **Ctype** repeatedly to select it.
 - 3 When you are in the following mode:
 - a. TMO — For a simplex call, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For a duplex call, press and release SEND key. You hear a ringing tone.
 - b. DMO — Only simplex call is available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.
 - 4 To end the call, press the END key.
-

6.2 Dialing through Soft Numeric Keypad

Prerequisites:

Direct Private Number Dialing is assigned to a right NAVIGATION key.

Procedure Steps

- 1 From the home screen, press and hold right NAVIGATION key.

Step result: Your radio displays dialing number prompt.

- 2 Rotate the ROTARY KNOB or press up/down NAVIGATION key to choose the number, then press the knob or right NAVIGATION key to go to the next digit.



NOTE

- You can enter # at the end when the Speed Dialing feature is enabled.
 - The + sign you can enter only when you are editing the first position. Both signs are available after digit 9.
-

- 3 Press PTT.
-

6.3 Phone and PABX Calls

The Phone Call allows you to call a landline telephone number or a cellular mobile phone number. The Private Automatic Branch Exchange (PABX) Call allows you to call local (office) extension numbers.

6.3.1 Making a Phone or PABX Call

Prerequisites:

Direct Private Number Dialing is assigned to a right NAVIGATION key.

Procedure Steps

- 1 From the home screen, press and hold right NAVIGATION key and enter the number.
 - 2 If **Phone** or **PABX** are not the first type of call presented, press **Ctype** repeatedly to select it.
 - 3 Press SEND key.
-

6.4 Phone/PABX Speed Dial

This feature allows you to dial Phone/PABX by a shortened number of up to three digits instead of the full number. The Phone/PABX **Speed #** number is assigned when the dialed number is added in the contact list.

**NOTE**

This feature is available only in TMO Mode.

6.4.1 Using Phone/PABX Speed Dial

Procedure Steps

- 1 From the home screen, enter the predefined Phone/PABX speed dial number and # key.
 - 2 Press SEND key.
-

6.5 MS-ISDN

This feature adds to the radio ISDN number. You can choose between MS-ISDN and ISSI to address the call, send the message or pre-defined templates. It works for both simplex and duplex calls, based on the assigned ISDN number.

6.6 DTMF Overdial

This feature allows you to communicate with an automated answering device (for example, the voice mail or answering machine) during an on-going private, phone or PABX call.

While in an on-going private, phone or PABX call, press the DTMF keys (0-9, *, #). When pressed, the DTMF key sounds a tone and the entered digit is displayed on the screen.

6.7 Short Number Dial

This feature allows you to dial part of the full number of the person you wish to call. Your radio automatically completes the number.

Example:

Your radio number is 4282564.

1. Dial 564 (instead of 4282564, the full number).
2. To place the call, press the PTT button or the SEND key.

6.8 WAP

Wireless Application Protocol (WAP) is a standard for application layer network communications in a wireless communication environment such as TETRA network. The protocol is used to access the mobile web from a radio through a WAP browser.

This is a selling feature.

SEE ALSO[WAP Push](#)[WAP Box](#)

6.8.1 WAP Browser

The Openwave Mobile Browser is a WAP-complaint user agent. The WAP browser provides all of the basic services of a computer-based web browser. Whenever any preemptive display interrupts the browser session, the browser needs manual reactivating to return. The WAP browser does not support right-to-left languages (as Arabic and Hebrew); English is used instead. For the content in these languages, the characters are not displayed.

6.8.2 Entering/Exiting the Browser

Prerequisites:

From the home screen, press MENU key. Set **Setup** → **Data Setup** to **Data Only** or **Voice & Data**.

Procedure Steps

- 1 From the home screen, press MENU key.
 - 2 Select **Browser**.
-

6.8.3 Entering the Browser Menu Panes

Prerequisites:

You are in the browser.

Procedure Steps

- 1 Press **Menu** or MENU key.
 - 2 Usually, it brings up the Navigate pane, or the last browser menu pane.
-

**NOTE**

If the web page you navigated to has two or more soft keys/options, the **Options** pane pops up. From here, you may scroll to other panes with the left or right navigation keys Or you may select **Browser Menu** and then scroll to the required pane.

6.8.4 Tips for Browsing

Create and use the following for easy browsing.

6.8.4.1 Creating a Bookmark through Navigate Pane

Procedure Steps

- 1 Enter the browser and browse to the required page.

 - 2 Press **Menu** to enter the browser menu.

 - 3 Select **Mark Page**.

 - 4 The screen displays the title and URL of the marked page.

 - 5 To save it:
 - a. Press **Save** (or **Select**) to save the page in bookmarks.
 - b. Select **Menu** and select an option:
 - **Save** — Confirms the bookmark creation.
 - **Edit** — Allows you to edit the title, folder, choice, and URL of the created bookmark.
-

6.8.4.2 Creating a Bookmark through Bookmarks Pane

Procedure Steps

- 1 Enter the browser.

- 2 Scroll to **Bookmarks** pane.

- 3 Select **Organise** (if there are no saved bookmarks), or **More...** .

- 4 Select **Menu**.

- 5 Scroll to **New Bookmark**.

- 6 Enter the bookmark title and URL, and select its location.

- 7 Press **Save**.

6.8.4.3 Using a Bookmark

Procedure Steps

-
- 1 Enter the browser.
-
- 2 Scroll to **Bookmarks** pane.
-
- 3 Scroll to the required bookmark and select **Go**. The bookmark downloads the selected page from the web.
-

6.8.4.4 Saving a Page

When and where to use:

Save a page for off-line browsing.

Procedure Steps

-
- 1 Enter the browser and browse to the required page.
-
- 2 Press **Menu**.
-
- 3 Scroll to **Tools** pane.
-
- 4 Select **Save Page**. Edit the proposed page title if required. Scroll down and select **Save**. The page will be saved in the **Bookmarks Saved Pages** folder.
-

6.8.4.5 Selecting a Saved Page

Procedure Steps

-
- 1 Enter the browser.
-
- 2 Scroll to **Bookmarks** pane.
-
- 3 Select **Organise** (if there are no saved bookmarks), or **More...**
-
- 4 Select **Go** to enter the Saved Pages folder.
-
- 5 Select a saved page and press **Ok**. The display shows the saved page. Depending on the saved page, you may browse the web from here.
-

6.8.5 Disabled Packet Data Service

If there is no Packet Data Service, your radio displays **Error:No Network Available** when entering the browser for the first time. Select left SOFT key to retry entering, or right SOFT key to enter the browser menu.

When re-entering the browser with previously available Packet Data, the radio displays the last browsed page, or the last page to which you navigated off-line.

6.8.6 Disabled Browser Entry

Browser entry is disabled:

- During any type of voice call, except Ambience Listening Call
- In DMO Mode
- During Emergency Mode
- During PIN lock
- Service provider has not configured this feature
- When the radio is disabled



NOTE

- Browser entry is enabled during Ambience Listening (AL) Call. If you navigate to previously stored pages, the AL state remains.
- When you activate Packet Data for the first time, AL is disconnected, and you have the same look and feel as if you were not in AL before.

6.8.7 Keys Usage

When the browser is active, the following usage described occurs inside or outside the editor.

Table 6-1 Browser Keys Usage

Key Press	Action
Left or right SOFT keys	Selects the option that appears in the display directly above the left and right soft key (part of the page).
Up NAVIGATION key	While in list of options, moves up one line.
Press and hold up NAVIGATION key	Moves up on page.
Down NAVIGATION key	While in list of options, moves down one line.
Press and hold down NAVIGATION key	Moves down on page.
Left NAVIGATION key	Moves to the previous pane. In the editor: moves left.
Press and hold left NAVIGATION key	Functions as backward.
Right NAVIGATION key	Moves to the next pane. In the editor: moves cursor to the right and inserts space if at the end of the word.
Press and hold right NAVIGATION key	Functions as forward.
Press and hold at the center of NAVIGATION keys	Auto-repeat

Table 6-1 Browser Keys Usage (cont'd.)

Key Press	Action
MENU key	Brings up the browser menu.
END key	Press to deactivate the browser.
SEND key	Disabled in browser active state.
ROTARY KNOB	
EMERGENCY button	Deactivates the browser. The radio enters Emergency Mode.

6.8.8 Browser Menu Panes Overview

The browser menu includes the following panes:

Table 6-2 Browser Menu Panes

Menu Pane	Description
Navigate	Provides access to the home page and commonly used items.
Bookmarks	Provides access, editing, and storage options to stored bookmarks and saved pages.
History	Provides access to recently visited pages and shows the position of the currently loaded page in the history stack.
Tools	Provides access to applications and utilities.

The following panes are displayed according to the context:

Table 6-3 Additional Menu Panes

Menu Pane	Description
Options	Displayed only when there are additional options for the pane or page.
Image	Displayed only when an image is selected. Provides access to image details, storage, and display use.
Input Text	Displayed only in text entry mode. Provides access to text entry mode (for example: symbol).

6.8.9 Navigate Pane

You can select one of the following items:

- **Home** — for loading the home page.
- **Open Page** — for entering the URL.
- **Search** — item disabled.
- **Mark Page** — for creating (saving) a bookmark for the current document. A title and URL for the bookmark are displayed, and the root folder is chosen for the location.

- **Forward** — for navigating to the document located one step forward in the navigation history. If there is no forward history, this item is disabled.
- **Reload** — for reloading the current document.
- **Advanced...** — see following section.

6.8.10 Advanced...

From the Navigation pane select **Advanced...** to see the following options:

- **Settings...**
 - **Downloads** — for setting download preferences. You may deactivate the downloading of images and objects. The browser displays a special icon instead of the images and objects.
 - **Scroll Mode** — for setting the scrolling mode and speed.
 - **Key Press Timeout** — for setting key press time-out. This time-out is used for text entry.
 - **Set Proxy** — select the WAP Proxy (1, 2, 3). The browser connects to the web via the selected proxy or gateway. The network provider installs and configures the proxy. To establish a secure session, select a secure proxy. Please ask your service provider which proxy is configured for a secure session. Though you can choose your home page, the service provider may decide to force its own home page on your terminal.
 - **Circuit Prompt** — for turning on/off the circuit prompt.
 - **Resend Data Prompt** — for turning on/off the data re-send prompt.
- **Security...**
 - **Secure Prompt** — for enabling/disabling the browser to inform you that it replaced a non-secure connection with a secure connection, and the other way around.
 - **Current Certificate** — for viewing the digital certificate identifying the server that delivers the current document. A Certificate Authority (CA) digitally signs and thus authenticates this certificate. Up to ten additional custom WTLS certificates can be added to the default list of certificates installed. Please ask your service provider if you wish to have these custom WTLS certificates added.
 - **CA Certificates** — for viewing the digital certificates installed in the browser and digitally signed by Certificate Authorities (CA).
 - **Send Referrer** — for turning ON/OFF sending of the HTTP Referrer header as part of HTTP requests. The Referrer header provides the URL of the link source to the server.
 - **Authentication** — for turning ON/OFF the caching of HTTP Authentication credentials. HTTP Authentication protects access to content on the server. If you try to access a protected content, you enter your credentials (user name or password).
- **Clear...** — for clearing of browser data: history, cache cookies, or auto-fill.
- **Restart Browser** — for restarting the browser.
- **About...** — for showing the information about the current version of Openwave Mobile Browser.

6.8.11 Bookmarks Pane

If there are bookmarks in the root folder, select **More...** to access the Options pane. If the root folder is empty, select **Organise...** then press MENU key to access the Options pane. The Options pane allows you to manage bookmarks. The **Saved Pages** folder contains snapshots of saved pages.

6.8.11.1 Working with the Options Pane for a Selected Bookmark

Procedure Steps

- 1 From the Bookmarks pane select **More...** .

 - 2 Scroll to a bookmark.

 - 3 Press MENU to open the Options pane for that bookmark.

 - 4 Select one of the following:
 - **Back** — for displaying the page associated with the bookmark (page is downloaded if not available in cache).
 - **Details** — for modifying the bookmark title and URL.
 - **Delete** — for deleting the bookmark.
 - **New Bookmark** — for creating a new bookmark.
 - **New Folder** — for creating a new folder.
 - **Move** — for moving this bookmark to a new folder (or in Bookmarks).
 - **Delete All** — for deleting all bookmarks.
 - **Hotkeys** — for assigning hotkeys to available bookmarks.
-

6.8.11.2 Working with the Saved Pages Folder

Procedure Steps

- 1 From the Bookmarks pane select **Saved Pages** folder.

 - 2 The browser displays the page (snapshot) saved using Save Page in Tools pane.

 - 3 Scroll to a saved page.

 - 4 Press **Menu** to open the Options pane for the saved page.

 - 5 Select one of the following:
 - a. **Back** — for displaying this page saved on its cache.
 - b. **Details** — for modifying the page title and URL of the saved page.
 - c. **Update Page** — for replacing the saved version with the current version (to be downloaded from server).
 - d. **Delete** — for deleting this page from its cache.
 - e. **Delete All** — for deleting all the saved pages from its cache.
 - f. **Cancel** — for exiting this pane and returning to the last page displayed.
-

6.8.12 History Pane

This pane displays the list of recently visited pages (up to nine history entries can be listed). Each history entry shows its title, if present. Otherwise, **No Title** is displayed.

6.8.12.1 Navigating to the Recently Visited URL

Procedure Steps

- 1 Select the URL.
 - 2 Press **Ok**.
-

6.8.13 Tools Pane

Procedure Steps

- 1 From the Tools pane select **More...**
 - 2 Scroll to a document.
 - 3 Select MENU key to open the Options pane for that document.
 - 4 Select one of the following:
 - **Show URL** — For displaying the current page URL.
 - **Save Page** — For creating a snapshot for the current document.
 - **Find Text** — For finding a text string in the current document.
 - **Copy Text** — For copying text from the current document to the clipboard.
-

6.8.14 Options Pane

This pane is specific to the page or pane being displayed.

6.8.15 Image Pane

This pane appears in the browser menu when you enabled the download of images through Navigate pane > **Advanced...** > **Settings...** .

The following items are available:

- **Save** — for saving the image in the terminal.
- **[Send]** — for sending the image to the destination of your choice.
- **Reload** — for reloading the image.

- **Details** — for displaying the image details.
- **Show Image** — for showing the image on its own page.

6.8.16 Text Input Pane

Prerequisites:

This pane is visible when the browser menu is opened and text entry field is active.

When and where to use:

To input the text for the URL.

Procedure Steps

- 1 Select the URL.
- 2 Press **abc**.
Step result: The text input pane opens up.
- 3 Select **www**.
- 4 Scroll the required extension (for example: **.com**).
- 5 Press **.com**. The screen displays the URL with the selected extension.

Table 6-4 Browser Text Input Icons

Mode	Soft Key	Action
Alphabetic characters - lower case	abc	Enter text in lowercase.
Alphabetic characters - upper case	ABC	Enter text in uppercase.
Numeric	123	Enter numbers and symbols.
http mode	www	Enter

6.8.17 WAP Push

WAP push allows WAP content to be pushed to a radio. This push is carried out by sending a specially formatted (Push Access Protocol) XML document to the Push Proxy Gateway, that in turn forwards the document to the radio.

A WAP push message is an encoded message including a link to a WAP address. On receiving a WAP push, a WAP enabled radio automatically gives the option to access the WAP content. The implemented WAP push is compliant to WAP 2.0 standard.

The radio supports WAP 2.0 through a proxy only. Proxy-less connections are not supported

This is a selling feature.

SEE ALSO[WAP](#)[WAP Box](#)

6.8.17.1 New WAP Messages

Types of the WAP Messages and their priorities:

**NOTE**

Your service provider sets the priority of the message.

- Push Message
 - High — animation and the icon (blinking) are displayed with the New WAP Message tone.
 - Medium — animation and the icon are displayed with the New WAP Message tone.
 - Low — icon is displayed with the New WAP Message tone.
 - Delete — available only if you are in WAP Box, the text **WAP Message deleted remotely** is displayed, otherwise there is no indication.

**NOTE**

Animation is not displayed if you are in a call, or in Emergency Mode, or in Call Out, or in message editor, or PIN lock state, or switching to DMO.

- Load Push Message
 - High — browser opens to the user with the New WAP Message tone.
 - Low — the icon is displayed with the New WAP Message tone.

**NOTE**

Browser does not open if you are in a call, or in Emergency Mode, or in Call Out, or in message editor, or PIN lock state, or switching to DMO.

6.8.17.2 Viewing a WAP Message

Procedure Steps

- 1 From the home screen, press MENU key.
- 2 Select **Messages** → **WAP Box**.
- 3 Select the required message.
- 4 Select **Go to** to view the message in the browser.

6.9 Call-Out

This feature allows you to receive call-out alerts. When the Call-Out messages are received the radio, it interrupts current services and attends to the call-out alert without any further delay. After call-out alert has been cleared, the radio exits Call-Out mode and reverts to normal mode. you are only able to receive Emergency Calls during Call-Out mode.

SEE ALSO

[CO Box](#)

6.9.1 Types of Call-Out Alerts

There are four types of the Call-Out alert:

- Normal call-out
- Storm plan — it is sent to a group more than one to raise reliability. You can only accept the Call-Out by pressing any button and is moved to information phase.
- Fallback Mode — it includes only voice communication. It can be cleared manually.



NOTE

Fallback is only possible when Radio is in Local Site Trunking.

- Test Call-Out — dispatcher is able to test this feature. Radio is generating the tone and displays **Test Call-Out**. Press the **Test OK** to confirm and to clear the test.

6.9.2 Call-Out Modes Interaction

Call-Out feature operation is different in other modes:

- TXI Mode — you can read the message but you cannot respond to it. You have an option to leave the TXI Mode by pressing soft key or reject the Call-Out message.
- DMO Mode — Call-Out is not supported.
- Emergency Mode — all Call-out alerts are ignored.

6.9.3 Call-Out Service Phases

In the Call-Out mode there are following phases:

- Alerting phase — receives a Call-Out message. The alarm tone indicates the message. Text is displayed and you have following options to use: **Accept**, **Reject** or **MENU**. If you accept the alert, no other service from this point can interrupt.



NOTE

You can stop the alert tone by pressing PTT or any of the soft keys.

- Information phase — you are still in the Call-Out mode and you can receive more detail information about the incident that occurred through subsequent text or the voice message. You can query for more information using voice group call or Call-Out text function which enables you to send a text message. You can always respond and send back the text or the voice message using voice group call.

6.10 Voice Operating Transmission (VOX) Control

Voice Operating Transmission (VOX) Control feature allows you to transmit voice in a hands-free condition. If this feature is enabled and the loud speaker is turned on, your radio activates the microphone when you speak and deactivates it when you are silent. It is used during either a Duplex Private Call or a Phone Call, when a currently connected and active accessories are not Full Duplex capable.

Example:

An external speaker is turned on with a fist microphone activated.

Appendix A: Tones

Table A-1 Radio Tones

Tone Name	Default Tone Diagram
Back to Coverage Back to Full Service	
Clear-to-send	
Bad Key Pressed	
From Out-of-Service to In Service	
In Emergency	
Talk Permit	
- Talk prohibit - System busy - Time-out timer expire - Called radio not available or busy	
Call Disconnected or Failed Due to Network	
Toggling Between DMO and TMO	

Table A-1 Radio Tones (cont'd.)

Tone Name	Default Tone Diagram
Entering/Exiting Local Site Trunking	
Receiving/Sending Emergency Alarm	
Emergency Alarm Failed	
Entering Emergency	
Exiting Emergency	
Entering TXI	
Exiting TXI	
Low Battery Alert	

**NOTE**

All the audible indications can be disabled by your service provider.

Appendix B: LED Indications

Table B-1 LED Indications

Indication	Status
Solid green	In use
Blinking green	In service
Solid red	Out of service
Blinking red	Connecting to the network Entering DMO
Solid orange	Transmit inhibit in service Channel busy in DMO
Blinking orange	Incoming call
No indication	Idle Radio powered down

Appendix C: Troubleshooting

Your radio displays the following messages:

Table C-1 Displayed Messages

Message	Message Description
...-Received	Call received but not answered, or rejected.
Attachment Failed	Your radio could not perform talkgroup attachment. It keeps on trying. If it does not succeed, try another talkgroup.
Authenticate Failure	Your radio could not register on an authenticated system (for example, the Authentication Key is incorrect, or authentication is disabled).
Call Cancelled	You have canceled the call.
Call Ended	- Faulty channel. Please try later. - You have ended the call.
Call Fwd	The radio you are trying to call is not available and the call is being forwarded to another radio.
Call Ended	- Faulty channel. Please try later. - You have ended the call.
Call Modified	The call you are participating in has been modified.
Call Preempted	Channel being used for priority.
Decryption Failed	An error occurred while decrypting a message or call.
Emgcy In Use Wait For Mic	The Hot Microphone feature is active, but the channel transmit grant has been given to another Emergency call on the same talkgroup. Your radio microphone is not active during this time, but it automatically tries to regain talk permit after a predetermined time.
Emgcy Mic Ended	The Hot Microphone timer automatically expired, or you pressed the PTT button to cancel the Hot Microphone feature.
Emgcy Mic On	The Hot Microphone feature is active, and your radio is automatically transmitting hands free emergency audio.
Empty Entry	The speed number you dialed does not exist, or the number exists but the group is non-selectable.
Faulty Unit Error	Self-test failed. An operational fault has been detected with your radio. Record the error number. Turn your radio off and contact service.
Gateway available	Your radio has connected to a gateway.
Gateway not available	Your radio cannot connect to a gateway, or connection has been lost.
This group already exists	The group you are attempting to add exists in the My Groups folder.
Individual Only	You can make only individual (private) calls.
Insufficient visible data	Your radio is in the process of determining your location. This process may take several minutes to complete.

Table C-1 Displayed Messages (cont'd.)

Message	Message Description
Insufficient visible satellites	Your radio is in the process of determining your location. This process may take several minutes to complete.
Invalid ID	The entered number is not valid.
Invalid Shortcut Position	The entered number is not valid.
Limited Service	Emergency Calls, Emergency Alarms, and mobility operations (for example group attachment) are allowed. All other incoming and outgoing call and data services are blocked.
List Empty	There are no programmed entries in the scrolling list. Type the entry.
List Not Attached	All talkgroups in the scan list are not attached.
List Partially Attached	The scan list is active, but not all talkgroups are attached to it.
Message Delivered	Indicates mail successfully delivered.
Message Failed	Indicates mail delivery failure.
New Delivery Status	You have received a new Delivery Status.
No Service	Your radio is outside coverage. Return to coverage.
My Groups Is Empty	You cannot view/delete groups when the My Groups folder is empty.
My Groups Is Full	You are not allowed to add a group to the My Groups folder as it already contains the maximum allowed number of groups.
Network Trouble	Network problems. Please try again later.
No Answer	The called party does not answer.
No Entries	This message is displayed when accessing an empty list.
No Group	• Attachment failed. Your radio detached from current talkgroup. Please wait until it attaches again to the current talkgroup. • Displayed when you are out of the normal coverage area of your selected talkgroup. Please select a new talkgroup that is valid for your working location. • Indicates a favorite group was removed from the My Groups folder.
No List	The network list is empty.
No New or Old Messages	Indicates there are no new or old messages in the Inbox .
No Selected Scan List	You selected an empty network list.
No Service	Your radio is out of coverage.
Not Allowed To Initiate Call	You are not allowed to dial a number which is not in the address book.
Not Allowed To Transmit	Release the PTT button and try again later. You are not allowed to send a text message or a status message to a number which is not in the address book.

Table C-1 Displayed Messages (cont'd.)

Message	Message Description
Single TalkGroup Only	There is only one programmed entry in the scrolling list.
Overheating, Please Turn Radio Off	Your radio turns off. Keep it turned off for 5 minutes.
Party Busy	Called radio is busy.
Party Not Available	Called radio is out-of-range or turned off. Please try again later.
Please Try Again	You could not call.
Please Wait Connecting	A message during startup.
Registration Failure	Your radio could not register within the system. Please try again later.
Repeater available	Your radio has connected to a repeater.
Repeater unavailable	Your radio cannot connect to a repeater, or connection has been lost.
Service Denied	Invalid number. Call your service provider.
Service Not Available	This service is not available on the current network.
Service Restricted	This service is by your service provider, it has not been purchased, or it is not available.
TalkGrp ... cannot be deleted	Your service provider set this group so you cannot delete it from the favorite talkgroup folder.
Try Again Later	The requested service is temporarily unavailable.
Radio Disabled	Check with your service provider.
Unit is OK Warn:	Self-test error. A minor fault has been detected. Your radio is still fully operative. If this error recur, note the error code and contact service.
Unit Not Attached	You radio could not attach to the system. The talkgroup may not be defined in the system. Please try another group.

Appendix D: Maintenance



SUGGESTION

- Before using your radio for the first time, remove the plastic lens protector from the display, and charge the battery until the LED green light appears.
- Battery charging must occur only in non-hazardous areas.
- Clean the connector frequently and before the programming procedure for example, with a soft brush (do not use fluids).

D.1 Storage

Do not store your battery where the temperatures exceed +65° C or fall below -20 ° C. New Lithium-Ion batteries may be stored in ventilated, cool and dry areas with some capacity loss in the life cycle. It is not recommended to store the batteries when they are fully charged or discharged.

D.2 Extending Battery Life

A battery is an expendable part and may need replacing during the life of the radio. To ensure maximum service life of your radio, always replace the battery with a genuine Motorola replacement. In order to ensure maximum life for your battery:

- Do not charge it unless necessary (low battery indication).
- Charge it until full charge indication is on.
- Turn off the radio before charging.

D.3 Battery Charging Temperature

Your charger only charges your battery when it is at temperature range of 1° C to 37° C. As the temperature gets colder (close to 0° C) less capacity is stored in the battery.

If, during charging, the temperature is out of range, the battery might not be fully charged since the charging is temporarily stopped until the temperature becomes suitable. The temperature range of battery operation is from 0° C to +45° C in charger mode and from -10° C to +60° C in discharge mode.

D.4 Battery Charging Rules

Generally, to reduce the number of charge cycles as much as you can, wait for the **Low Battery** message to charge, as it ensures maximum battery life. Do not use your charger as a radio holder or leave your radio and fully charged battery connected to the charger while not charging. Continuous charging shortens the battery life.

D.5 Additional Battery Warnings/Cautions

- Battery storage above 60° C and below -20° C is not recommended.
- To prevent injury, do not allow metal objects to touch the battery contacts.
- Do not disassemble.
- Do not throw in fire.
- Do not dispose of battery in household waste.